



For more information, please visit www.mova.tech

Manufactured by: XingKuang Innovation Technology (Suzhou) Co., Ltd.

Address: 12th Floor, Building 2, Wisdom Valley Park, Suzhou (Taihu) Software Industrial Park, No.
1463 Wuzhong Avenue, Yuexi Street, Wuzhong Economic Development Zone, Suzhou,
Jiangsu Province, P.R. China

Poland

Service Hours (Local Time): 9:00 am-6:00 pm Mon-Sun

Email: movasupport.pl@mova-tech.com

Hotline Number: 48800003628

NEE

Service Hours (Local Time): 9:00 am-6:00 pm Mon-Sun

Email: movasupport.nee@mova-tech.com

Made in China

V2517A-EU-S01



MOVA S2 Detect **Cordless Stick Vacuum** **User Manual**

Safety Instructions

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Warning— To reduce the risk of fire, electric shock, or injury:

- This appliance is for indoor use only.
- This product can be used by children aged from 8 years and above and persons with physical, sensory, intellectual deficiencies, or limited experience or knowledge under the supervision of a parent or guardian to ensure safe operation and to avoid any risk of hazards. Cleaning and maintenance shall not be carried out by children without supervision.
- The vacuum is not a toy. Children shall not play with or operate this product. Please exercise caution when using the vacuum near children. Do not allow children to clean or maintain the vacuum unless supervised by a parent or guardian.
- Do not use the vacuum outdoors or on wet surfaces. Only use the vacuum on dry indoor surfaces. Do not touch the plug or any part of the vacuum with wet hands.
- To reduce the risk of fire explosion, or injury, make sure that the lithium battery and supply cord are undamaged before use. Do not use the vacuum if either the lithium battery or supply cord is damaged.
- The brushes, battery, extension rod and vacuum are electrically conductive and should not be immersed in water or other liquid. Make sure to dry all filters after cleaning.
- To prevent injury caused by moving parts, turn off the vacuum before cleaning them. These parts must all be properly installed before using the vacuum.
- Do not use the vacuum to pick up flammable or combustible liquids, such as gasoline, or bleach, ammonia, drain cleaners or other Liquids.
- Do not use the vacuum to pick up drywall particles, ashes like fireplace ash, or smoking or burning materials such as coal, cigarette butts or matches.
- Check the area to be cleaned before use. To prevent the openings from being blocked, clear the larger paper; spitball, plastic cloth or sharp objects (such as glass, nails, screws, coins, etc.) and any object which is larger than openings.
- Keep hair Loose clothing, fingers and other parts of the body away from the vacuum's openings and moving parts. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.
- Do not put any object into the vacuum's openings. Do not use the vacuum with any opening blocked. Keep free of dust, lint, hair; or other items which may reduce airflow.
- Do not Lean the vacuum against a chair; table, or other unstable surface, as this may cause damage to the machine or personal injury. If the vacuum becomes damaged or is otherwise malfunctioning, please contact our authorized service department. Never attempt to disassemble the device on your own.
- ALL instructions in the manual for recharging the battery must be strictly followed. Failure to properly charge the battery within the specified temperature range could damage the battery.
- Only use accessories and replacement parts recommended by the manufacturer.
- Make sure the vacuum is off and unplugged when not used for extended periods as well as prior to performing any maintenance or repairs.

- Please be extra careful when using the vacuum to clean stairs.
- Do not install, charge, or use this product outdoors, in bathrooms, or around a pool.
- Fire Hazard Warning: Do not apply any type of fragrance to the vacuum's filter. These types of products are known to contain flammable chemicals which may cause the vacuum to catch fire.
- Only use the approved battery type (Model HC-21Y-1). Do not use any non-rechargeable battery pack. Failing to do so may cause the lithium-ion battery to catch fire.
- If the battery material is released, remove personnel from area until the batteries cool down and fumes dissipate.
- Provide maximum ventilation to clear out hazardous gases and avoid skin and eye contact or inhalation of vapors.
- Remove spilled Liquid with absorbent and incinerate waste.
- Do not use and store in extremely hot or cold environments (below 0°C /32°F or above 40°C /104°F). Please charge the cordless vacuum in temperature above 0°C /32°F and below 40°C/104°F.
- The supply terminals are not to be short-circuited.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



For indoor use only



Class II equipment



time-lag miniature fuse-link

 
where JT25A is the symbol for the time/current characteristic

We, XingKuang Innovation Technology (Suzhou) Co., Ltd. hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: www.mova.tech


For detailed e-manual, please go to
<http://mova-tech.com/pages/user-manuals-and-faqs>

Product Overview

Accessory List



Vacuuming main unit

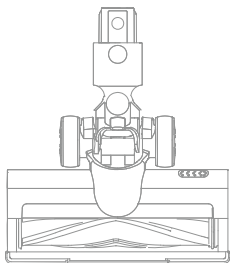


Electric cleaner head



2-in-1 Long crevice tool



Foldable extension tube

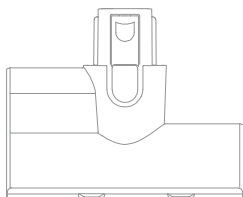

Electric mite removal head



Anti-collision strip



 
Battery pack



Attachment storage clip



Charger




Mopping unit


Note: The images in this manual are for illustrative purposes only. The actual product may differ.

Product Overview

Component Names

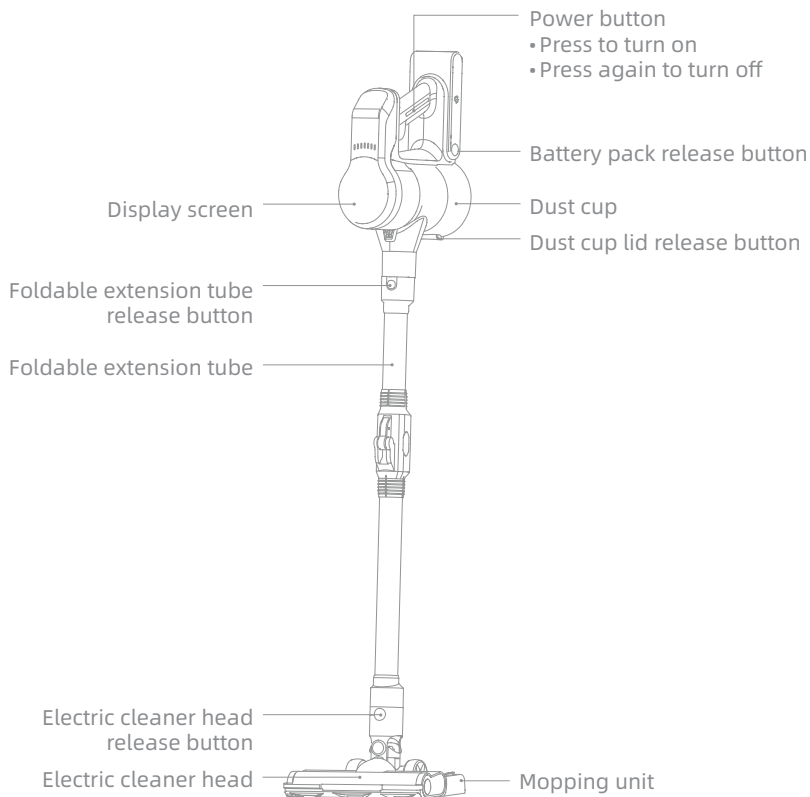

Introduction of Display Screen

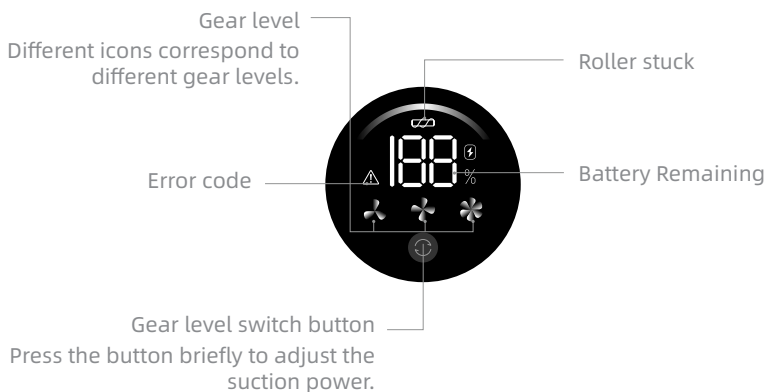


Storage

Attach the anti-collision strip to the designated position on the battery pack as shown in the diagram.

After assembling the vacuum cleaner, press the foldable extension tube latch to fold the vacuum cleaner.

Secure attachment storage clip to the illustrated position on the foldable extension tube, and then attach the electric mite removal head and 2-in-1 long crevice tool to the accessory storage clip in sequence.

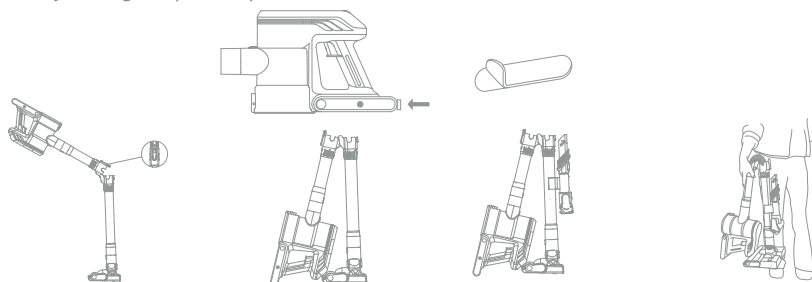

Note:

- To prevent the risk of tipping over, the product must not be placed upright.
- To avoid pinching your hands, please hold the extension tube when lifting the vacuum cleaner.

Charging

Note:


- Fully charge the vacuum before using it for the first time.
- A full charge will take approximately 4.5 hours.
- Using Turbo mode for a prolonged period will cause the battery to heat up, which increases charging time. Allow the vacuum to cool down for 30 minutes before charging it.

Charging Method

Install the battery pack on the vacuum and charge it with the charger.

The battery pack can also be charged separately.

The vacuum cleaner can also be charged while folded for storage.

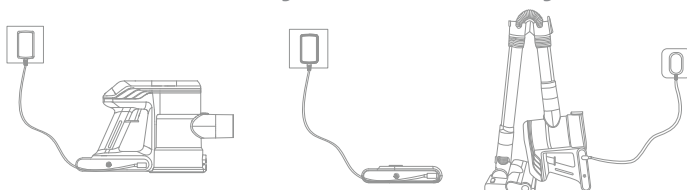

Note: The vacuum cleaner must be charged as shown in the illustration.


All instructions in the manual for recharging the battery must be strictly followed.

Failure to properly charge the battery within the specified temperature range could damage the battery.

How to Use


Used as a Vertical Vacuum Cleaner

- Connect the foldable extension tube to the electric cleaner head and main vacuuming main unit until you hear a click.
- Press the power button to turn on the appliance.

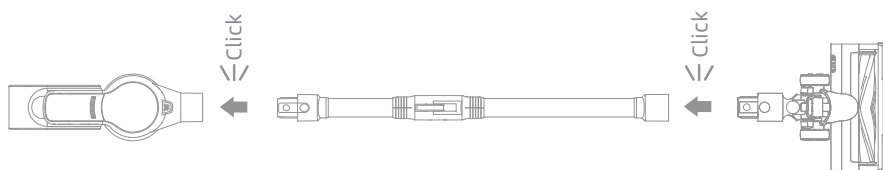

Used as a Handheld Vacuum Cleaner

The vacuuming main unit can be directly connected with the 2-in-1 long crevice tool, electric cleaner head, or electric mite removal head.

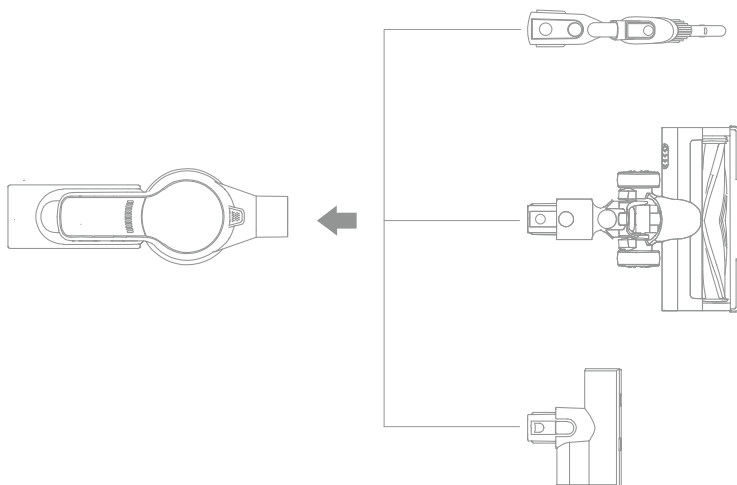

Using Different Accessories

Electric cleaner head

While the electric cleaner head is working, the LED light at the front end is turned on. When using the vacuum cleaner, the electric cleaner head rotates continuously at high speed. Do not stay in the same spot for too long, as this may damage the floor surface.

2-in-1 long crevice tool





It can be used to vacuum the dust from desktops, keyboards, sofa gaps, household appliances, and other surfaces.

It can be also applicable to cleaning dust at wall corners, gaps, door and window corners, and shallow and narrow places.

How to Use


Electric mite removal head

It can be used as a tool for cleaning household carpets, sofa, mattresses, etc.

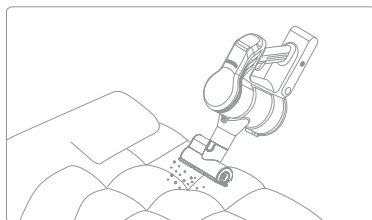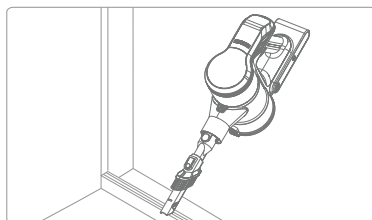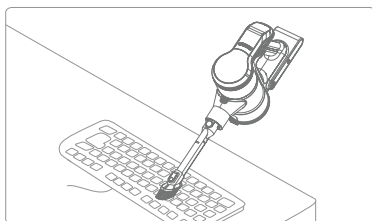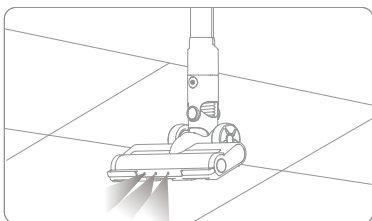

Mopping unit

1. Open the water tank plug, add an appropriate amount of clean water, close the plug, and then attach the mop pad to the bottom of the water tank.
2. Align the water tank with the bottom of the electric cleaner head, and then clip it in, ensuring the water tank is in place.
3. When the water tank comes into contact with the ground, the water in the water tank will drip through the water dispenser hole to wet the mop.
4. After startup, the vacuum cleaner starts cleaning operation of vacuuming together with mopping.
5. Remove the water tank after use, open the water tank plug, pour out the remaining water, and then close the plug.

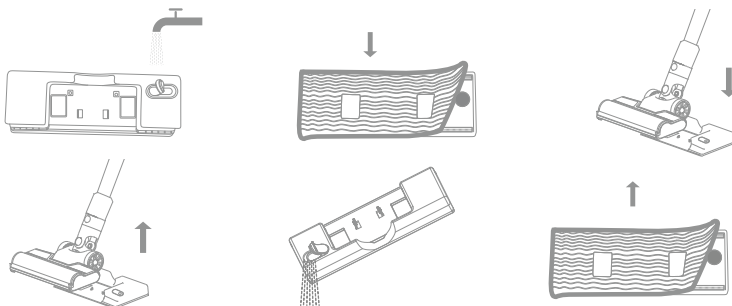

Note:

- Before installing and replacing accessories, power off the vacuum cleaner.
- This product cannot keep itself upright without fixed support. For storage, the machine and the accessories shall be stably placed.


Care & Maintenance

Tips:

- Always use genuine parts to avoid voiding the warranty.
- If the filter is clogged, the vacuum cleaner will stop functioning shortly after it is turned on. Please clean up the filter to restore function. Before cleaning the dust cup, please verify that the plug has been disconnected and the power button of the vacuum cleaner has been left in the "OFF" position.
- If the vacuum cleaner is not used for a long time, please fully charge it, unplug the power cord, and store it in a cool and low-humidity environment, avoiding direct sunlight. To avoid excessive battery discharging, please charge the battery at least once every three months.

Cleaning the Dust Cup, Air Inlet Filter, and Cyclone Separator Assembly

1. Press the dust cup release button, and remove the cup from the vacuum cleaner.
2. Hold the separator, and rotate it clockwise to remove it from the vacuum cleaner.
3. Remove the air inlet filter from the cyclone separator.
4. Rinse the cyclone assembly and air inlet filter until they are clean. After cleaning, dry it by air for at least 24 hours.

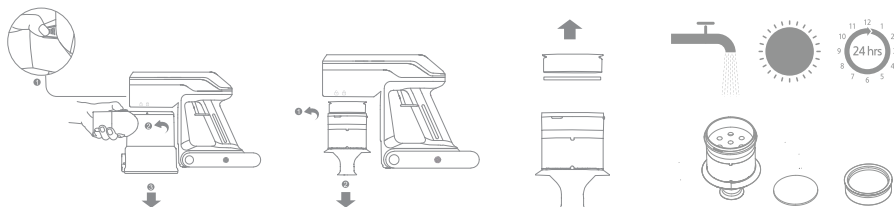


Attention:

- It is recommended to wipe the dust cup with a wrung-out cloth at least once a month.
- It is recommended to clean the pre-filter every 3 months and the components of cyclone system every 6 months.
- For the sake of your health, it is recommended that you empty the dust cup after each vacuuming session.

Installation of Dust Cup, Air Inlet Filter, and Cyclone Separator Assembly

1. Put the inlet filter back into the cyclone separator.
2. Hold the cyclone separator, and rotate it counterclockwise onto the vacuum cleaner.
3. Align the dust cup with the slot on the vacuum cleaner, and rotate it slowly until the dust cup clicks into place.

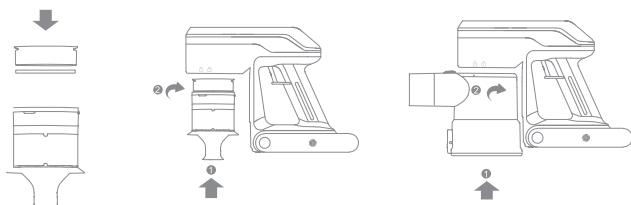


Care & Maintenance


EN

Cleaning Electric Cleaner Head


1. Toggle the lock knob of the roller brush in the arrow direction and lift the roller pressing plate at the same time, and then take out the roller brush.

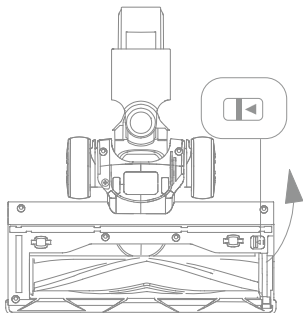


2. If any hair or thread-like materials are entangled on the roller brush, they can be cut off with scissors. Wipe up the dust from the groove and transparent cover with dry cloth or tissue. Wipe it up completely before use.

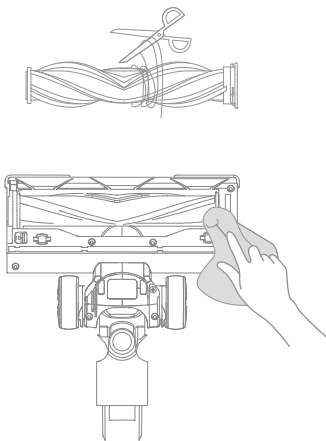

3. Rinse the brush roller. If it is dirty, rinse with clean water until it is clean.

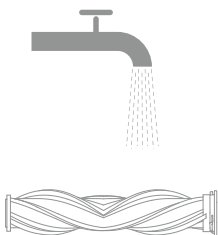



4. Stand the brush roller upright for at least 24 hours until it is dry completely.

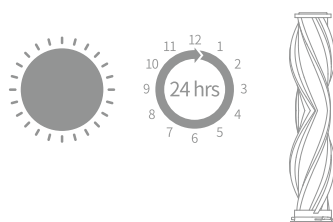


Care & Maintenance

Cleaning Electric Mite Removal Head

1. Use a coin or other similar shaped item to turn the lock counterclockwise until you hear click, and then pull out the roller brush.
2. If any hair or thread-like materials are entangled on the roller brush, they can be cut off with scissors. Wipe the slot and transparent cover with dry cloth or tissue.

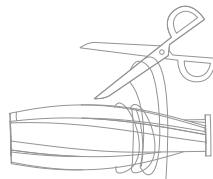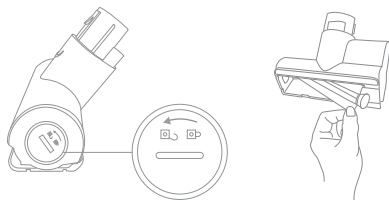

3. When it is dirty, rinse the roller with clean water until it is clean.


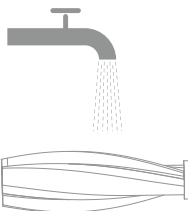


4. Stand the roller upright for at least 24 hours until it is completely dry.




Cleaning Mopping Unit

 1. Remove the water tank after use, open the water tank plug, and pour out the remaining waste.
2. Remove the mop pad from the bottom of the water tank, and rinse it with water.

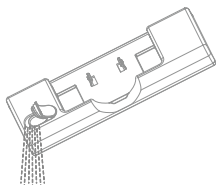

3. Please let the mop pad to dry after use.

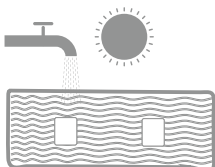

Specifications

Vacuum			
Model	V2517	Charging Time	Approximately 4.5 hours
Rated Power	460 W	Rated Voltage	25.9 V $\equiv$
Electric Cleaner Head			
Model	V2517		
Rated Power	15 W	Rated Voltage	25.9 V $\equiv$
Battery Pack			
Model	HC-21Y-1	Nominal Voltage	25.9 V $\equiv$
Rated Capacity	2500 mAh	Nominal Capacity	2500 mAh
Energy	64.75 Wh		
Electric Mite Removal Head			
Mode	V2517		
Rated Power	15 W	Rated Voltage	25.9 V $\equiv$
Charger			
Model	CZH015310060EUWQ		
Input	100-240 V~50/60 Hz 0.5 A MAX		
Output	31 V $\equiv$ 0.6 A		

The lithium-ion pack contains substances that are hazardous to the environment. Before disposing of the vacuum, please remove the battery pack, then discard or recycle it in accordance with local laws and regulations of the country or region it is used in.

The appliance must be disconnected from the power supply when removing the battery. Keep batteries out of the reach of children. Never put batteries in mouth. If swallowed, contact your physician or local poison control.

Under abusive conditions, never contact the battery from which the liquid may be ejected. If contact accidentally occurs, rinse with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.

Important note

When the vacuum cleaner works abnormally, please turn off the appliance and cut off the power!

Errors	Possible causes	Troubleshooting method
The appliance cannot start, and the power indicator light flickers for several times and then goes out automatically	Low battery power	Charge the product
The vacuum cleaner has no suction power or little suction power	The dust cup is full	Empty the trash in the dust cup
	The dust cup or separator filter is not installed correctly	Reinstall the dust cup or separator filter properly
There is an obvious dust leak from the vacuum cleaner	The dust cup is full	Empty the trash in the dust cup
	The dust cup or separator filter is not installed correctly	Reinstall the dust cup or separator filter properly
The roller brush stops rotating, the power indicator light keeps flickering	The roller brush gets entangled or stuck, and the protection device starts up	Clean the entanglements in the electric cleaner head
The air duct or dust cup filter element is blocked, the machine stops working, the E7 indicator light and the fault warning light continue to flash, and shut down after 10 seconds	Too many or too large particles of garbage are inhaled in	Clean up the dust cup and filter element of the machine
The service time is shortened after charging	The charging time is insufficient	Please charge the product fully
	The battery is aged	Purchase an original battery to replace

Troubleshooting

If the vacuum is not working properly, the screen display will show an error message. Please refer to the troubleshooting table to find your solution.

Error Icon	Status	Error Message	Solutions
	Blinking Red	Roller brush stuck	Refer to the maintenance guide [Cleaning the electric cleaner head] section to clean the fiber material and hair wrapped around the brush roller.
If one of the error codes from E2/E6/E7 appears on the display, please contact the after-sales service team for repair. E2: Motor short circuit protection E6: Overcurrent during charging, abnormal charger voltage E7: Light load protection			

WEEE Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.