


# USER MANUAL

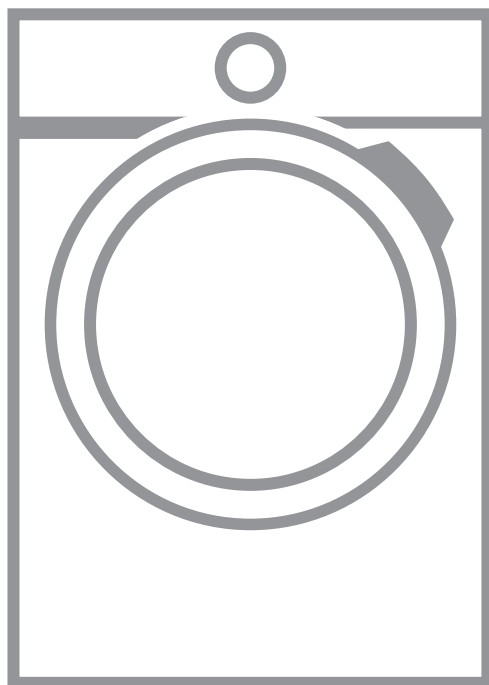

**AEG**

# CONTENTS

|                                                                                 |    |
|---------------------------------------------------------------------------------|----|
| 1. SAFETY INFORMATION.....                                                      | 3  |
| 2. SAFETY INSTRUCTIONS.....                                                     | 4  |
| 3. INSTALLATION.....                                                            | 6  |
| 4. ACCESSORIES.....                                                             | 9  |
| 5. PRODUCT DESCRIPTION.....                                                     | 10 |
| 6. CONTROL PANEL.....                                                           | 11 |
| 7. DIAL AND BUTTONS.....                                                        | 12 |
| 8. PROGRAMMES.....                                                              | 15 |
| 9. SETTINGS.....                                                                | 19 |
| 10. BEFORE FIRST USE.....                                                       | 20 |
| 11. DAILY USE.....                                                              | 20 |
| 12. HINTS AND TIPS.....                                                         | 24 |
| 13. CARE AND CLEANING.....                                                      | 26 |
| 14. TROUBLESHOOTING.....                                                        | 30 |
| 15. CONSUMPTION VALUES.....                                                     | 33 |
| 16. TECHNICAL DATA.....                                                         | 34 |
| 17. QUICK GUIDE.....                                                            | 35 |
| 18. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION<br>1369/2017..... | 36 |

## FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler - features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:

**[www.aeg.com/webselfservice](http://www.aeg.com/webselfservice)**



Register your product for better service:

**[www.registeraeg.com](http://www.registeraeg.com)**



Buy Accessories, Consumables and Original spare parts for your appliance:

**[www.aeg.com/shop](http://www.aeg.com/shop)**

## CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

## 1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

### 1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

### 1.2 General Safety

- Do not change the specification of this appliance.
- This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels, bed & breakfast and other residential type environments;
- areas for communal use in blocks of flats or in launderettes.
- Do not exceed the maximum load of 6 kg (refer to the "Programme chart" chapter).
- The operating water pressure at the water entry point from the outlet connection must be between 0.5 bar (0.05 MPa) and 8 bar (0.8 MPa).
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- The appliance must be connected to the water mains using the new supplied hose sets, or other new hose sets supplied by the Authorised Service Centre.
- Old hose sets must not be reused.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- Clean the appliance with a moist cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

## 2. SAFETY INSTRUCTIONS

### 2.1 Installation



The installation must comply with relevant national regulations.

- Remove all the packaging and the transit bolts including rubber bush with plastic spacer.
- Keep the transit bolts in a safe place. If the appliance is to be moved in the future they must be reattached to lock the drum to prevent an internal damage.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Follow the installation instructions supplied with the appliance.

- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature can be less than 0°C or where it is exposed to the weather.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.
- Do not install the appliance directly above a floor drain.
- Do not spray water on the appliance and do not expose it to excessive humidity.
- Do not install the appliance where the appliance door cannot be fully opened.
- Do not put a closed container to collect possible water leakage under the appliance. Contact the Authorised Service Centre to ensure which accessories can be used.

## 2.2 Electrical connection



### **WARNING!**

Risk of fire and electric shock.

- The appliance must be earthed.
- Always use a correctly installed shockproof socket.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.

- Do not touch the mains cable or the mains plug with wet hands.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

## 2.3 Water connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.
- Do not use an extension hose if the inlet hose is too short. Contact the Authorised Service Centre for the replacement of the inlet hose.
- When unpacking the appliance, it is possible to see water flowing from the drain hose. This is due to the testing of the appliance with the use of water in the factory.
- You can extend the drain hose to maximum 400 cm. Contact the Authorised Service Centre for the other drain hose and the extension.
- Make sure that there is access to the tap after the installation.

## 2.4 Use



### **WARNING!**

Risk of injury, electric shock, fire, burns or damage to the appliance.

- Follow the safety instructions on the detergent packaging.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not wash fabrics which are heavily soiled with oil, grease or other greasy substances. It can damage rubber parts of the washing machine. Prewash such fabrics by hand before loading them into the washing machine.
- Do not touch the glass door while a programme operates. The glass can get hot.

- Make sure that all metal objects are removed from the laundry.

## 2.5 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

## 2.6 Disposal



### WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

# 3. INSTALLATION




### WARNING!


Refer to Safety chapters.

## 3.1 Unpacking


1. Remove the external film. If necessary, use a cutter.

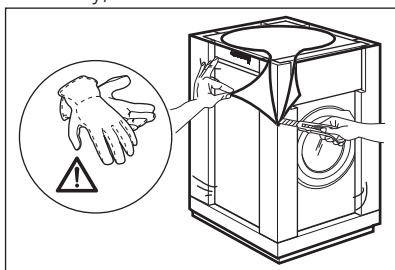


2. Remove the cardboard top and the polystyrene packaging materials.

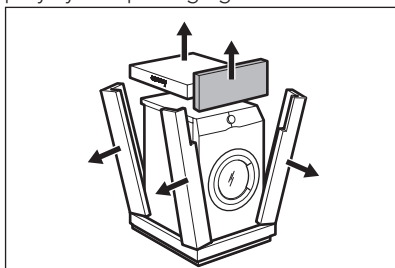


3. Open the door. Remove all the items from the drum.

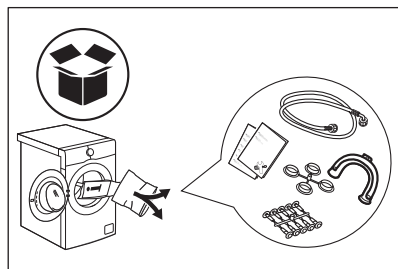


4. Put the front polystyrene packaging element on the floor behind the appliance. Carefully put down the appliance onto its rear side.

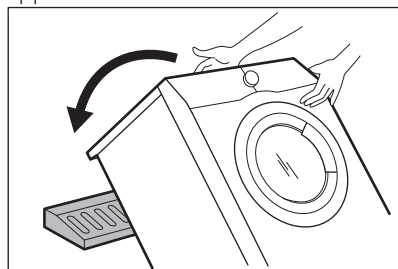

5. Remove the polystyrene protection from the bottom.

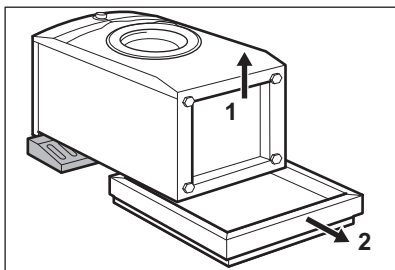


6. Put the appliance back into an upright position. Remove the power supply cable and the drain hose from the hose holder.

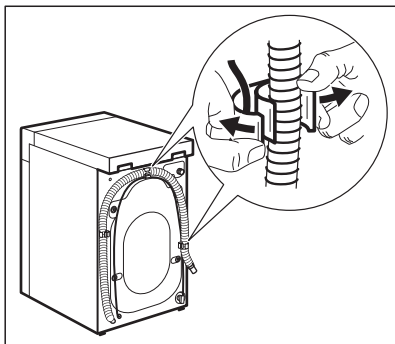


#### **WARNING!**

It is possible to see water flowing from the drain hose. This is because the washing machine has been tested at the factory.

7. Remove the four transit bolts and pull out the plastic spacers.

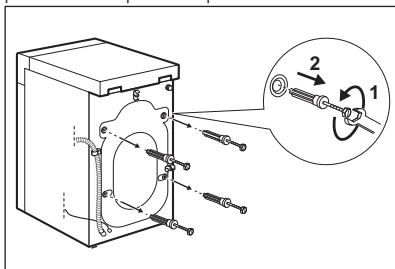


8. Put the plastic caps, that you find in the user manual bag, in the holes.

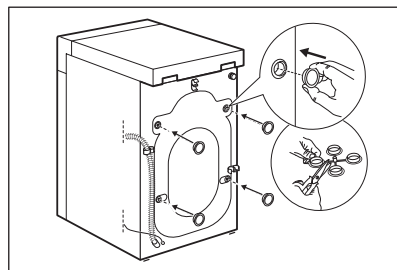

**We recommend that you keep the packaging and the transit bolts for any transport of the appliance.**

## **3.2 Positioning and levelling**

Adjust the appliance correctly to prevent vibration, noise and movement of the appliance when it operates.

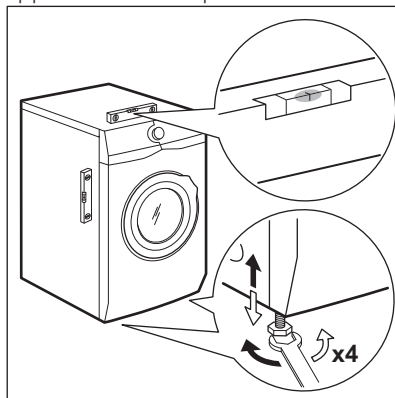

1. Install the appliance on a flat hard floor. The appliance must be levelled and stable. Make sure that the appliance does not touch the wall or other units and there is air circulation below the appliance.
2. Loosen or tighten the feet to adjust the level. All feet must rest firmly on the floor.




#### **WARNING!**

Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level.


### 3.3 The inlet hose

1. Connect the water inlet hose to the back of the appliance.
2. Position it toward left or right depending on the position of the water tap.

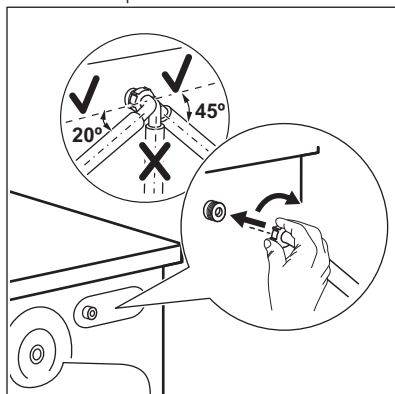

**i** Make sure that the inlet hose is not in vertical position.

3. If necessary, loose the ring nut to set it in the correct position.
4. Connect the water inlet hose to the cold water tap with 3/4" thread.

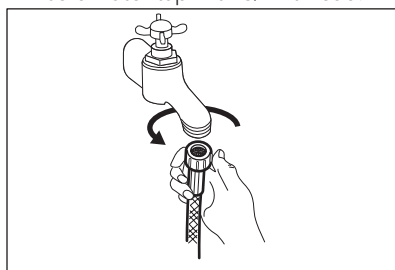

#### CAUTION!

Make sure that there are no leaks from the couplings.



Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose.

### 3.4 Water drainage


The drain hose should stay at a height of no less than 600 mm and not more than 1000 mm.




You can extend the drain hose to maximum 4000 mm. Contact the authorised service centre for the other drain hose and the extension.

It is possible to connect the drain hose in different ways:

1. Make a U shape with the drain hose and put it around the plastic hose guide.

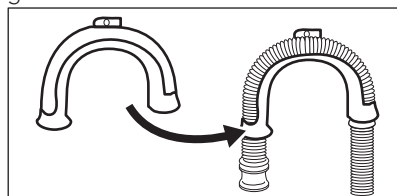


2. On the edge of a sink - Fasten the guide to the water tap or to the wall.

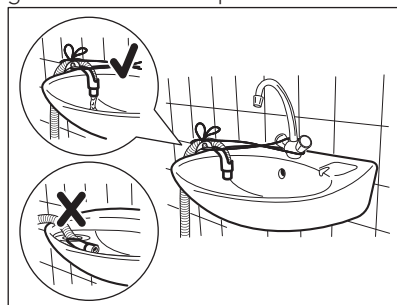


Make sure that the plastic guide cannot move when the appliance drains and the drain hose end is not immersed in the water. There may be a return of dirty water into the appliance.

3. If the end of the drain hose looks like this (see the picture), you can push it directly into the stand pipe.



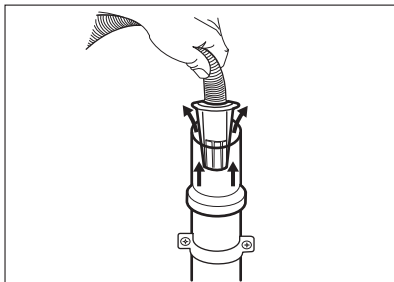


4. To a stand pipe with vent-hole - Insert the drain hose directly into a drain pipe. Refer to the illustration.

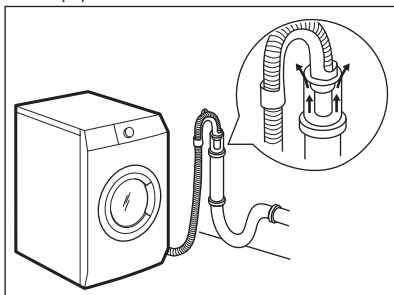


- i** The end of the drain hose must always be ventilated, i.e. the inner diameter of the drain pipe (min. 38 mm - min. 1.5") must be larger than the external diameter of the drain hose.

5. Without the plastic hose guide, to a sink spigot- Put the drain hose in the spigot and tighten it with a clamp. Refer to the illustration.

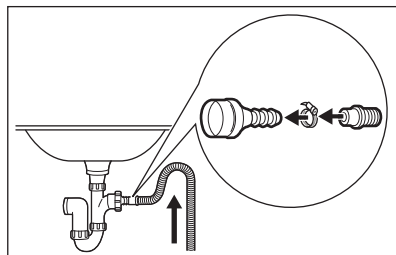

Make sure that the drain hose makes a loop to prevent particles going into the appliance from the sink.

6. Position the hose directly to a built-in drain pipe in the room wall and tighten it with a clamp.

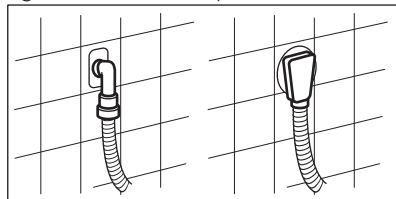

## 4. ACCESSORIES

### 4.1 Available in [www.aeg.com/shop](http://www.aeg.com/shop) or from authorised dealer

- i** Only appropriate accessories approved by AEG ensure the safety standards of the appliance. If unapproved parts are used, any claims will be invalidated.

### 4.2 Fixing plate kit

If you install the appliance on a plinth, secure the appliance with the fixing plates.

Read carefully the instructions supplied with the accessory.

## 5. PRODUCT DESCRIPTION

### 5.1 Special features


Your new washing machine meets all modern requirements for an effective treatment of laundry with low water, energy and detergent consumption and proper care of fabric.

- The **ProSense technology** adjusts automatically the programme

duration to the laundry in the drum to achieve perfect washing results in the minimum possible time.

- Thanks to the **Jemné+ option**, the fabric softener is uniformly spread out in the laundry and deeply penetrates the fabric fibres favouring a perfect softness.

### 5.2 Appliance overview

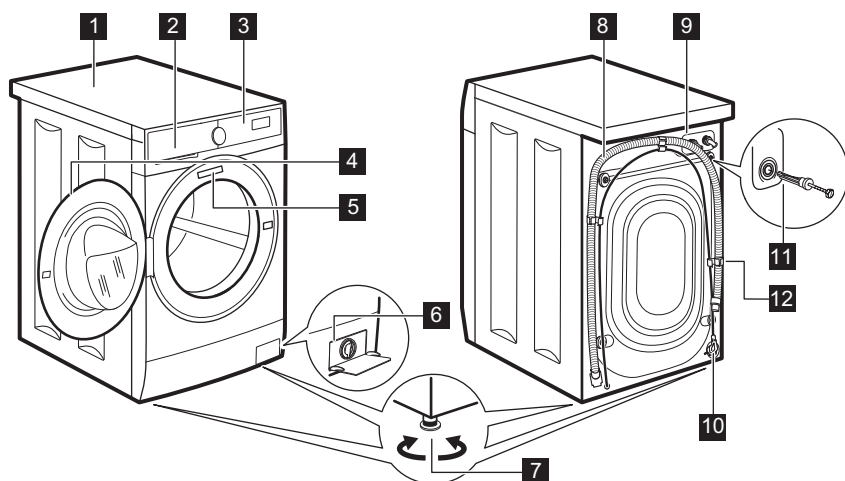


- 1** Worktop
- 2** Detergent dispenser
- 3** Control panel
- 4** Door handle
- 5** Rating plate
- 6** Drain pump filter
- 7** Feet for levelling the appliance

- 8** Drain hose
- 9** Inlet hose connection
- 10** Mains cable
- 11** Transit bolts
- 12** Hose support


## 6. CONTROL PANEL

### 6.1 Control panel description

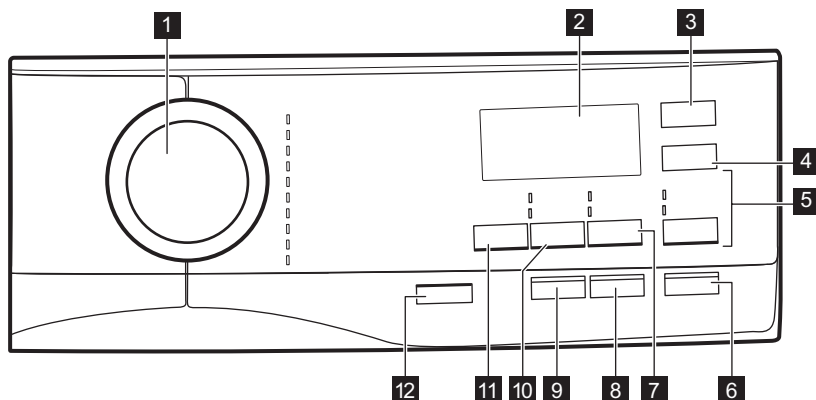

- |                                                                                                             |                                        |
|-------------------------------------------------------------------------------------------------------------|----------------------------------------|
| <b>1</b> Programme dial                                                                                     | • Předpírka option                     |
| <b>2</b> Display                                                                                            | <b>8</b> Odložený start touch button   |
| <b>3</b> Eco touch button  | <b>9</b> Jemné+ touch button           |
| <b>4</b> Úspora času touch button                                                                           | <b>10</b> Odstředování touch button    |
| <b>5</b> Máchání touch button                                                                               | • Skipping phases - Pouze vypouštění   |
| • Extra máchání option                                                                                      | • Skipping phases - Pouze odstředování |
| • Skipping wash phase - Pouze máchání                                                                       | <b>11</b> Teplota touch button         |
| <b>6</b> Start/Pauza touch button                                                                           | <b>12</b> Zap./Vyp. push button        |
| <b>7</b> Skvrny/Předpírka touch button                                                                      |                                        |
| • Skvrny option                                                                                             |                                        |

### 6.2 Display

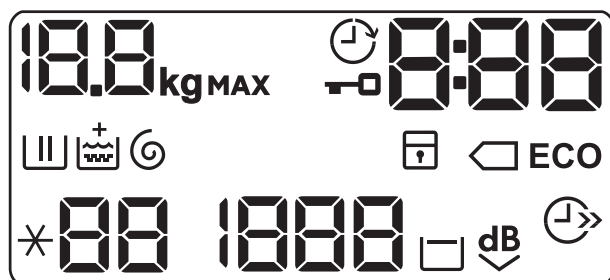

|                                                                                     |                                                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Maximum load indicator. The <b>kg</b> icon flashes during programme time estimation (refer to "PROSENSE load detection" paragraph).                                                                                                                                                                       |
|    | Delay start indicator.                                                                                                                                                                                                                                                                                    |
|    | Door locked indicator.                                                                                                                                                                                                                                                                                    |
|    | The digital indicator can show: <ul style="list-style-type: none"> <li>• Programme duration (e. g. 2:40).</li> <li>• Delay time (e. g. 30' or 2h).</li> <li>• Cycle end ().</li> <li>• Alarm code (e.g. E20).</li> </ul> |
|    | Energy saving indicators. The  indicator appears by selecting a programme for cotton at 40 °C or 60 °C.                                                                                                                  |
|    | Washing phase indicator: it flashes during prewash and wash phase.                                                                                                                                                                                                                                        |
|    | Rinsing phase indicator: it flashes during rinse phase.                                                                                                                                                                                                                                                   |
|    | The  indicator appears when the Jemné+ option is activated.                                                                                                                                                              |
|    | Spin and drain phase indicator. It flashes during spin and drain phase.                                                                                                                                                                                                                                   |
|    | Child safety lock indicator.                                                                                                                                                                                                                                                                              |
|    | Time saving indicator.                                                                                                                                                                                                                                                                                    |
|    | Temperature indicator. The  - indicator appears when a cold wash is set.                                                                                                                                                 |
|   | Spin speed indicator.                                                                                                                                                                                                                                                                                     |
|  | Rinse hold indicator.                                                                                                                                                                                                                                                                                     |
|  | Extra Silent indicator.                                                                                                                                                                                                                                                                                   |

## 7. DIAL AND BUTTONS

### 7.1 Zap./Vyp.

Pressing this button for a few seconds allows to activate or deactivate the appliance. Two different tunes sound while switching the appliance on or off.

As the Stand-by function automatically deactivates the appliance to decrease the energy consumption in a few cases, you may need to activate the appliance again.

For more details, refer to Stand-by paragraph in Daily Use chapter.

## 7.2 Introduction

- i** The options/functions are not selectable with all washing programmes. Check the compatibility between options/functions and washing programmes in the "Programme Chart". An option/function can exclude another one, in this case the appliance doesn't allow you to set the incompatible options/functions together. Make sure the screen and touch buttons are always clean and dry.

## 7.3 Teplota

When you select a washing programme, the appliance automatically proposes a default temperature.

Touch this button repeatedly until the desired temperature value appears on the display.

When the display shows the indicators  and , the appliance does not heat the water.

## 7.4 Odstředování

When you set a programme, the appliance automatically sets the maximum spin speed allowed.

Touch repeatedly this button to:

- **Decrease the spin speed.**

- i** The display shows only the spin speeds available for the set programme.
- **Activate the Rinse Hold option.**  
The final spin is not performed. The water of the last rinse is not drained out to prevent the fabrics from creasing. The washing programme ends with water in the drum.  
The display shows the indicator . The door stays locked and the drum turns regularly to reduce creasing. You must drain the water to unlock the door.

If you touch the Start/Pauza button, the appliance performs the spinning phase and drains the water.

- i** The appliance empties the water out automatically after 18 hours approximately.
- **Activate the Extra Silent option.**  
The intermediate and the final spinning phases are suppressed and the programme ends with water in the drum. This helps to reduce creasing.  
The display shows the indicator . The door stays locked. The drum turns regularly to reduce creasing. You must drain the water to unlock the door.  
As the programme is very quiet, it is suitable for use at night time when cheaper electricity tariffs are available. In some programmes the rinses are performed with more water.  
If you touch the Start/Pauza button, the appliance performs the only draining phase.

- i** The appliance empties the water out automatically after 18 hours approximately.
- **Activate the drain-only option (Skipping the wash, rinse and spin phases):** Pouze vypouštění.  
The appliance performs the only draining phase of the selected washing programme.  
The display shows the indicator  (cold), and the indicator  (no spin) and the indicator .  
• **Activate the spin-only option (Skipping the wash and rinse phases):** Pouze odstředování.



Before setting this option, select a suitable washing programme for the garments. The appliance will perform the most fitting spin cycle for your garments care (e.g. For synthetics items, first select the Syntetika washing programme and then the Pouze odstředování option).

The appliance performs only the spinning phase of the selected washing programme.

The display shows the indicator (cold), the phase indicator and the spin speed.

## 7.5 Skvrny/Předpírka

Press this button repeatedly to activate one of the two options.

The relevant indicator goes on in the display.

### • Skvrny

Select this option to add an anti-stain phase to a programme in order to treat heavily soiled or stained laundry with stain remover.

Pour the stain remover into compartment . The stain remover will be added in the appropriate phase of the washing programme.



This option is not available with a temperature lower than 40 °C.

### • Předpírka

Use this option to add a pre-wash phase at 30 °C before the washing phase.

This option is recommended for heavily soiled laundry, especially if containing sand, dust, mud and other solid particles.



The options can increase the programme duration.

## 7.6 Jemné+

Set the Jemné+ option to ensure perfect distribution of the fabric softener and improves the fabric softness.



This option increases slightly the programme duration.

## 7.7 Odložený start

With this option you can delay the start of a programme in a more convenient time.

Touch the button repeatedly to set the required delay. The time increases by steps of 30 minutes up to 90' and from 2 hours up to 20 h.

After touching the Start/Pauza button, the display shows the indicator and the selected delay time and the appliance begins the countdown.

## 7.8 Máchání

With this button you can select one of the following options:

### • Extra máchání option

This option adds a few rinses according to the selected washing programme.

Use this option for persons allergic to detergent residues and in areas where the water is soft.



This option increases slightly the programme duration.

### • Skipping wash phase - Pouze máchání



The appliance performs only the rinsing phase, the spinning and the draining phases of the selected programme.

The corresponding indicator above the touch button illuminates.

## 7.9 Úspora času

With this option you can decrease the programme duration.

- If your laundry is normally or lightly soiled, it may be advisable to shorten the washing programme. Touch this button **once** to decrease the duration.

- In case of smaller load, touch this button **twice** to set an extra quick programme.

The display shows the indicator .

## 7.10 Eco

The Eco option reduces the energy consumption maintaining good washing results.

Set this option for slightly or normally soiled items washed at 30°C or higher temperatures.

Water and energy consumption may depend on different causes, such as water pressure, its hardness and temperature, ambient temperature, type and quantity of laundry, the set options, spin speed and voltage fluctuations in

the electricity network. The display shows the indicator **ECO**.



If you select the Cotton programme at 40°C or 60°C and no other options are set, the display shows the indicator **ECO**; these are the standard cotton programmes, the most efficient programmes in terms of combined energy and water consumption.

## 7.11 Start/Pauza

Touch the Start/Pauza button to start, pause the appliance or interrupt a running programme.

# 8. PROGRAMMES

## 8.1 Programme Chart

Washing programmes

| Programme                                                                                           | Programme description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Washing programmes</b>                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Bavlna                                                                                              | <p><b>White cotton and coloured cotton.</b> Normal, heavy and light soil.</p> <p><b>Standard programmes for the Energy Label consumption values.</b> According to regulation 1061/2010, the programme Bavlna at 60 °C and the programme Bavlna at 40 °C with the  option are respectively the «Standard 60°C cotton programme» and the «Standard 40°C cotton programme». They are the most efficient programmes in terms of combined energy and water consumption for washing normally soiled cotton laundry.</p> <p> The water temperature of the washing phase may differ from the temperature declared for the selected programme.</p> |
| Syntetika                                                                                           | <b>Synthetic items or mixed fabric items.</b> Normal soil.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Jemné prádlo                                                                                        | <b>Delicate fabrics such as acrylics, viscose and mixed fabrics requiring gentler washing.</b> Normal soil.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <br>Vlna/Hedvábí | <b>Machine washable wool, hand washable wool and other fabrics with «hand washing» care symbol<sup>1)</sup>.</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

| Programme                                                                                    | Programme description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Antialergický                                                                                | <b>White cotton items.</b> This programme removes micro-organisms thanks to a washing phase with the temperature maintained above 60°C for some minutes. This helps in removing germs, bacteria, micro-organism and particles. The addition of vapour together with an additional rinsing phase ensures a proper removal of detergent residues and pollens/allergenic items, making it suitable for delicate and sensitive skins .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 20 min. - 3 kg                                                                               | <b>Cotton and synthetic items</b> lightly soiled or once worn.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Snadné žehlení                                                                               | <b>Synthetic items requiring a gentle wash.</b> Normal and light soil. <sup>2)</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Péřová bunda                                                                                 | Special programme for one <b>down jackets, synthetic blanket, duvet, bedspread</b> and so on.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <br>Outdoor | <p> Do not use fabric softener and make sure that there is no softener residue in the detergent dispenser.</p> <p><b>Outdoor clothing, technical, sport fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation.</b> The recommended laundry load is 2 kg. This programme can also be used as water-repellent restoring cycle, specifically tailored for treating clothes with a hydrophobic coating. To perform the water-repellent restoring cycle, proceed as follows:</p> <ul style="list-style-type: none"> <li>• Pour the washing detergent in the compartment .</li> <li>• Pour a special water-repellent restorer for fabric in the drawer compartment for fabric softener .</li> <li>• Reduce the laundry load to 1 kg.</li> </ul> <p> To further improve the water-repellent restoring action, dry the laundry in a tumble dryer by setting the Outdoor drying programme (if available and if the garment care label permits tumble drying).</p> |
| Denim                                                                                        | <b>Denim clothing and jersey items.</b> Normal soil. This programme performs a gentle rinsing phase, designed for denim, that reduces fading and does not cause washing powder residues on the fibres.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

<sup>1)</sup> During this cycle the drum rotates slowly to ensure a gentle wash. It can seem that the drum doesn't rotate or doesn't rotate properly, but this is normal for this programme.

<sup>2)</sup> To reduce creasing, this cycle regulates the water temperature and performs a soft wash and spin phase. The appliance adds some rinses.



Programme temperature, maximum spin speed and maximum load

| Programme                                                                                       | Default temperature<br>Temperature range | Reference spin speed<br>Spin speed range | Maximum load                             |
|-------------------------------------------------------------------------------------------------|------------------------------------------|------------------------------------------|------------------------------------------|
| <b>Washing programmes</b>                                                                       |                                          |                                          |                                          |
| Bavlna                                                                                          | 40 °C<br>95 °C - Cold                    | 1200 rpm<br>1200 rpm - 400 rpm           | 6 kg                                     |
| Syntetika                                                                                       | 40 °C<br>60 °C - Cold                    | 1200 rpm<br>1200 rpm - 400 rpm           | 3 kg                                     |
| Jemné prádlo                                                                                    | 30 °C<br>40 °C - Cold                    | 1200 rpm<br>1200 rpm - 400 rpm           | 1 kg                                     |
|  Vlana/Hedvábí | 40 °C<br>40 °C - Cold                    | 1200 rpm<br>1200 rpm - 400 rpm           | 1 kg                                     |
| Antialergický                                                                                   | 60 °C                                    | 1200 rpm<br>1200 rpm - 400 rpm           | 6 kg                                     |
| 20 min. - 3 kg                                                                                  | 30 °C<br>40 °C - 30 °C                   | 1200 rpm<br>1200 rpm - 400 rpm           | 1 kg                                     |
| Snadné žehlení                                                                                  | 40 °C<br>60 °C - Cold                    | 800 rpm<br>800 rpm - 400 rpm             | 2 kg                                     |
| Péřová bunda                                                                                    | 40 °C<br>60 °C - Cold                    | 800 rpm<br>800 rpm - 400 rpm             | 2 kg                                     |
|  Outdoor       | 30 °C<br>40 °C - Cold                    | 1200 rpm<br>1200 rpm - 400 rpm           | 2 kg <sup>1)</sup><br>1 kg <sup>2)</sup> |
| Denim                                                                                           | 30 °C<br>40 °C - Cold                    | 800 rpm<br>1200 rpm - 400 rpm            | 2 kg                                     |

<sup>1)</sup> Washing programme.

<sup>2)</sup> Washing programme and waterproofing phase.

## Programme options compatibility

|                                                                                                     | Bavlna | Syntetika | Jemné prádlo | Vlna/Hedvábí  | Antialergický | 20 min. - 3 kg | Snadné žehlení | Péřová bunda | Outdoor  | Denim |
|-----------------------------------------------------------------------------------------------------|--------|-----------|--------------|------------------------------------------------------------------------------------------------|---------------|----------------|----------------|--------------|-------------------------------------------------------------------------------------------|-------|
| Odstředování                                                                                        | ■      | ■         | ■            | ■                                                                                              | ■             | ■              | ■              | ■            | ■                                                                                         | ■     |
| Rinse Hold         | ■      | ■         | ■            | ■                                                                                              | ■             |                | ■              |              | ■                                                                                         | ■     |
| Extra Silent       | ■      | ■         | ■            |                                                                                                |               |                |                |              |                                                                                           | ■     |
| Pouze vypouštění                                                                                    | ■      | ■         | ■            | ■                                                                                              | ■             | ■              | ■              | ■            | ■                                                                                         | ■     |
| Pouze odstředování <sup>1)</sup>                                                                    | ■      | ■         | ■            | ■                                                                                              | ■             | ■              | ■              | ■            | ■                                                                                         | ■     |
| Skvrny <sup>2)</sup>                                                                                | ■      | ■         |              |                                                                                                | ■             |                | ■              |              |                                                                                           | ■     |
| Předpírka                                                                                           | ■      | ■         |              |                                                                                                | ■             |                | ■              |              |                                                                                           |       |
| Extra máchání                                                                                       | ■      | ■         | ■            |                                                                                                | ■             |                | ■              |              | ■                                                                                         | ■     |
| Pouze máchání                                                                                       | ■      | ■         | ■            | ■                                                                                              | ■             | ■              | ■              | ■            | ■                                                                                         | ■     |
|  ECO <sup>3)</sup> | ■      | ■         | ■            |                                                                                                |               |                |                |              |                                                                                           |       |
| Úspora času <sup>4)</sup>                                                                           | ■      | ■         | ■            |                                                                                                |               |                | ■              |              |                                                                                           |       |
| Odložený start                                                                                      | ■      | ■         | ■            | ■                                                                                              | ■             | ■              | ■              | ■            | ■                                                                                         | ■     |
| Jemné+                                                                                              | ■      | ■         | ■            |                                                                                                | ■             |                | ■              |              |                                                                                           | ■     |

<sup>1)</sup> Before setting this option, select a suitable washing programme for the garments. The appliance will perform the most fitting spin cycle for your garments care (e.g. For synthetics items, first select the Syntetika washing programme and then the Pouze odstředování option).

<sup>2)</sup> This option is not available with temperature lower than 40 °C.

<sup>3)</sup> This option is not available with a temperature lower than 30 °C.

<sup>4)</sup> If you set the shortest duration, we recommend that you decrease the load size. It is possible to fully load the appliance, however the washing results can be less satisfactory.

## 8.2 Woolmark Apparel Care - Blue



The wool wash cycle of this machine has been approved by The Woolmark Company for the washing of wool garments labelled as «hand wash» provided that the garments are washed according to the instructions issued by the manufacturer of this washing machine. Follow the garment care label for drying and other laundry instructions. M1459

The Woolmark symbol is a Certification mark in many countries.

## 9. SETTINGS

### 9.1 Introduction



When pressing a key combination, **do not tilt** your fingers downwards. The sensors of the underneath buttons are sensitive and may interfere with Your choice.

### 9.2 Child Lock

With this option you can prevent that the children play with the control panel.

- To **activate/deactivate** this option, touch the Skvrny/Předpírka and the Odstrědování buttons simultaneously until the indicator  **comes on/goes off** on the display.

You can activate this option:

- After you touch the Start/Pauza button: all the buttons and the programme dial are deactivated (except Zap./Vyp. button).
- Before you touch the Start/Pauza button: the appliance cannot start.

The appliance keeps the selection of this option after you switch it off.

### 9.3 Acoustic signals

This appliance is provided with different acoustic signals, that operate when:

- You activate the appliance (special short tune).

- You deactivate the appliance (special short tune).
- You touch the buttons (click sound).
- You make a wrong selection (3 short sounds).
- The programme is completed (sequence of sounds for about 2 minutes).
- The appliance has a malfunction (sequence of short sounds for about 5 minutes).

To **deactivate/activate** the acoustic signals when the programme is completed, touch the Skvrny/Předpírka and the Odložený start buttons simultaneously for about 6 seconds.



If you deactivate the acoustic signals, they continue operate when the appliance has a malfunction.

### 9.4 Permanent Extra Rinse

With this option you can permanently have an extra rinse when you set a new programme.

- To **activate/deactivate** this option touch the Máchání button and the Skvrny/Předpírka button simultaneously until the indicator of the Extra máchání button **comes on/goes off**.

## 10. BEFORE FIRST USE

1. Make sure that the electrical power is available and the water tap is open.
2. Pour 2 litres of water into the detergent compartment marked as **2**.

This action activates the drain system.

3. Pour a small quantity of detergent into the compartment marked as **2**.

4. Set and start a programme for cotton at the highest temperature without any laundry in the drum.

This removes all possible dirt from the drum and the tub.

## 11. DAILY USE



### WARNING!

Refer to Safety chapters.

### 11.1 Activating the appliance

1. Connect the mains plug to the mains socket.
2. Open the water tap.
3. Press the Zap./Vyp. button for a few seconds to activate the appliance.

A short tune sounds (if activated). The programme dial is automatically set on Cotton programme .


The display shows the maximum load, the default temperature, the maximum spin speed, the indicators of the phases making up the programme and the cycle duration.

### 11.2 Loading the laundry

1. Open the appliance door.
2. Shake the items before you put them in the appliance.
3. Put the laundry in the drum, one item at a time.

Make sure not to put too much laundry in the drum.

4. Close the door firmly.

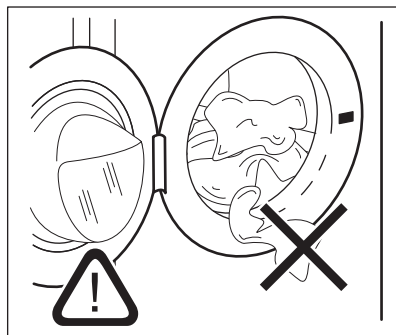


### CAUTION!

Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry.

### 11.3 Using detergent and additives

1. Measure out the detergent and the fabric conditioner.
2. Put the detergent and the fabric conditioner into the compartments.
3. Carefully close the detergent drawer

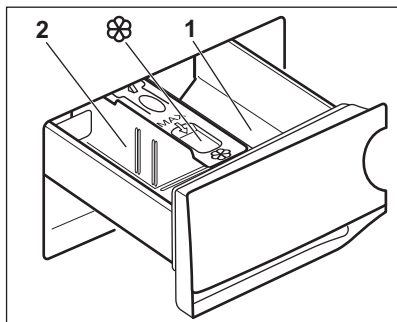**CAUTION!**

Use only specified detergents for washing machine.




Always obey the instructions that you find on the packaging of the detergent products.

|                                                                                     |                                                                                                                                                     |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | Detergent compartment for prewash phase or soak programme (if available). Add the detergent for prewash and soak before the start of the programme. |
| 2                                                                                   | Detergent compartment for washing phase. If you use a liquid detergent, put it immediately before you start the programme.                          |
|  | Compartment for liquid additives (fabric conditioner, starch). Put the product in the compartment before you start the programme.                   |


After a washing cycle, if necessary, remove any detergent residue from the detergent dispenser.

## 11.4 Changing position of detergent divider

1. Pull out the detergent dispenser. The position **A** of the detergent divider is for **powder detergent** (factory setting).

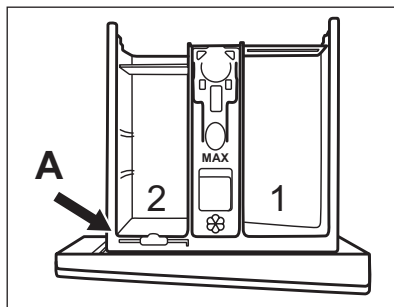


2. To use also liquid detergent/additive or bleach: Remove detergent divider from the position **A** and insert it in position **B**.

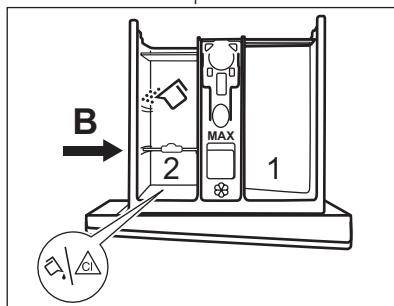


The position **B** of the detergent divider is for powder detergent in the rear compartment and for liquid detergent/additive or bleach in the front compartment.

3. To use only liquid detergent: Insert the detergent divider in position **C**.

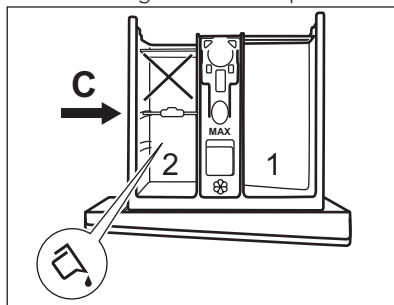

- Do not use gelatinous or thick liquid detergents.
- Do not exceed the maximum dose of liquid detergent.
- Do not set the prewash phase.
- Do not set the delay start function.

4. Measure out the detergent and the fabric conditioner and carefully close the detergent dispenser.

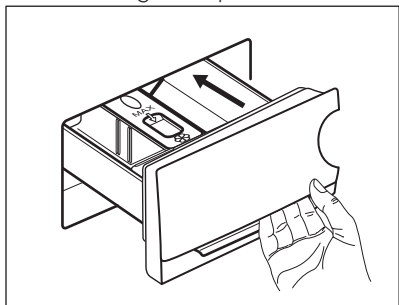

Make sure that the detergent divider is inserted properly and does not cause a blockage when you close the drawer.

## 11.5 Setting a programme

1. Turn the programme dial to select the desired washing programme. The related programme indicator comes on.

The indicator of the Start/Pauza button flashes.

The display shows the maximum declared load for the programme, the default temperature, the maximum spin speed, the washing phase indicators (when available) and an indicative programme duration.

2. To change the temperature and/or the spin speed, touch the related buttons.
3. If desired, set one or more options by touching the related buttons. The related indicators come on in the display and the given information changes accordingly.



In case a selection is **not possible**, no indicator comes on and an acoustic signal sounds.

## 11.6 Starting a programme

Touch the Start/Pauza button to start the programme.

The related indicator stops flashing and stays on.

In the display, the indicator of the operating phase starts flashing.

The programme starts, the door is locked. The display shows the indicator



The drain pump can operate shortly before the appliance fills water.

## 11.7 Starting a programme with the delay start

1. Touch the Odložený start button repeatedly until the display shows the desired delay time. The indicator



comes on.

2. Touch the Start/Pauza button. The appliance starts the countdown of the delay start. When the countdown is completed, the programme starts.



The PROSENSE adapts starts at the end of the countdown.

## Cancelling the delay start after the countdown has started

To cancel the delay start:

1. Touch the Start/Pauza button to pause the appliance. The related indicator flashes.
2. Touch the Odložený start button repeatedly until the display shows
3. Touch the Start/Pauza button again to start the programme immediately.

## Changing the delay start after the countdown has started

To change the delay start:

1. Touch the Start/Pauza button to pause the appliance. The related indicator flashes.
2. Touch the Odložený start button repeatedly until the display shows the desired delay time.
3. Touch the Start/Pauza button again to start the new countdown.

## 11.8 The ProSense load detection

After touching the Start/Pauza button:

1. The indicator  flashes.
2. The ProSense starts the laundry load detection to calculate the real programme duration. The indicator **kg** and the time dots  flash.
3. After about 15 minutes the display shows the new programme duration: the indicator **kg** goes off and the time dots  stops flashing. The appliance adjusts automatically the programme duration to the load to achieve perfect washing results in the minimum possible time. The programme duration could increase or decrease.

 The ProSense detection is carried out with complete washing programmes only (no skipping phase selected).

## 11.9 Programme phase indicators

When the programme starts the indicator of the running phase flashes and the other phase indicators are steady on.

E.g. the washing or pre wash phase is

running:  .

When the phase ends the relevant indicator stops flashing and is steady on. The next phase indicator starts flashing.

E.g. the rinse phase is running:  .

## 11.10 Interrupting a programme and changing the options

When the programme is running, you can change **only some** options:

1. Touch the button Start/Pauza. The related indicator flashes.
2. Change the options. The given information in the display changes accordingly.
3. Touch the button Start/Pauza again. The washing programme continues.

## 11.11 Cancelling a running programme

1. Press the button Zap./Vyp. to cancel the programme and to deactivate the appliance.
2. Press the button Zap./Vyp. again to activate the appliance.

Now, you can set a new washing programme.

 If the ProSense phase is already carried out and the water filling is already started, the new programme starts **without repeating the ProSense phase**. The water and the detergent are not drained out in order to avoid waste.

## 11.12 Opening the door - Adding garments

While a programme or the delay start operates, the appliance door is locked.

 If the temperature and level of the water in the drum are too high and/or the drum still rotates you cannot open the door.

1. Touch the button Start/Pauza. In the display the related door lock indicator goes off.
2. Open the appliance door. If necessary, add or remove the items.
3. Close the door and touch the button Start/Pauza.

The programme or the delay start continues.

## 11.13 End of the programme

When the programme has finished, the appliance stops automatically. The acoustic signals operate (if they are active).

In the display all washing phase indicators become steady and the time area shows .

The indicator of the Start/Pauza button goes off.

The door unlocks and the indicator  goes off.

1. Press the Zap./Vyp. button to deactivate the appliance.  
After five minutes from the end of the programme, the energy saving function automatically deactivates the appliance.

 When you activate the appliance again, the display shows the end of the last selected programme. Turn the programme dial to set a new cycle.

2. Remove the laundry from the appliance.
3. Make sure that the drum is empty.
4. Keep the door and the detergent dispenser slightly ajar to prevent mildew and odours.
5. Close the water tap.

## 11.14 Draining water out after end of cycle

If you have chosen a programme or an option that does not empty out the water of the last rinse, the programme is completed, but:

- The display shows the indicator , the option indicator  or  and the door locked indicator . The indicator of the running phase  flashes.
  - The drum still turns at regular intervals to prevent the creases in the laundry.
  - The door stays locked.
  - You must drain the water to open the door:
1. If necessary, touch the Odstředování button to decrease the spin speed proposed by the appliance.

2. Touch the Start/Pauza button:

- If you have set , the appliance drains the water and spins.
- If you have set , the appliance only drains the water.

The option indicator  or  goes out, while the indicator  flashes and then goes off.

3. When the programme is completed and the door locked indicator  goes off, you can open the door.
4. Press the Zap./Vyp. button a few seconds to deactivate the appliance.

 In any case, the appliance empties the water out automatically after approximately 18 hours.

## 11.15 Stand-by option

The Stand-by function automatically deactivates the appliance to decrease the energy consumption when:

- You do not use the appliance for 5 minutes before you touch the Start/Pauza button.  
Press the button Zap./Vyp. to activate the appliance again.
- After 5 minutes from the end of the washing programme  
Press the Zap./Vyp. button to activate the appliance again.  
The display shows the end of the last set programme.  
Turn the programme dial to set a new cycle.

 If you set a programme or an option that ends with water in the drum, the Stand-by function **doesn't deactivate** the appliance to remind you to drain the water.

# 12. HINTS AND TIPS




**WARNING!**  
Refer to Safety chapters.

## 12.1 The laundry load

- Divide the laundry into: white, coloured, synthetics, delicates and wool.



- Follow the washing instructions on the laundry care labels.
- Do not wash white and coloured items together.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first couple of times.
- Turn multilayered fabrics, wool and items with printed illustrations inside out.
- Pre-treat tough stains.
- Wash heavy soil stains with a special detergent.
- Be careful with curtains. Remove the hooks and put the curtains in a washing bag or pillowcase.
- Do not wash laundry without hems or with cuts. Use a washing bag to wash small and/or delicate items (e.g. underwired bras, belts, tights, shoelaces, ribbons, etc. ).
- A very small load can cause balance problems with the spin phase leading to excessive vibration. If this occurs:
  - a. interrupt the programme and open the door (refer to "Daily Use" chapter);
  - b. manually redistribute the load so that the items are spaced evenly around the tub;
  - c. press the Start/Pauza button. The spin phase continues.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts, cords, shoelaces, ribbons and any other loose elements.
- Empty pockets and unfold the items.

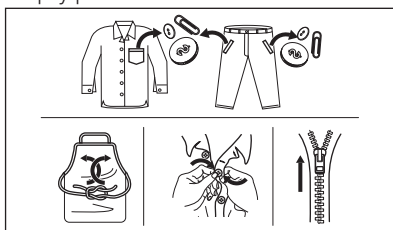

## 12.2 Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you pre-treat these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

## 12.3 Detergents and other treatments

- Only use detergents and other treatments specially made for washing machines:
  - powder detergents for all types of fabric, excluding delicate. Prefer powder detergents containing bleach for whites and laundry sanitization
  - liquid detergents, preferably for low temperature wash programmes (60 °C max) for all types of fabric, or special ones for woollens only.
- Do not mix different types of detergents.
- To help the environment, do not use more than the recommended quantity of detergent.
- Follow the instructions that you find on packaging of the detergents or other treatments without exceeding the indicated maximum level (**MAX**).
- Use the recommended detergents for the type and colour of the fabric, the programme temperature and the level of soil.

## 12.4 Ecological hints

- Set a programme without the prewash phase to wash laundry with normal soil.
- Always start a washing programme with the maximum load of laundry allowed.
- If you pre-treat the stains or use a stain remover, set a programme with a low temperature.
- To use the correct quantity of detergent, check the water hardness of your domestic system. Refer to "Water hardness".

## 12.5 Water hardness

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water

hardness is soft it is not necessary to use a water softener.

To find out the water hardness in your area, contact your local water authority.

Use the correct quantity of water softener. Follow the instructions that you find on the packaging of the product.

## 13. CARE AND CLEANING



### **WARNING!**

Refer to Safety chapters.

### 13.1 External cleaning

Clean the appliance with mild soap and warm water only. Fully dry all the surfaces.



### **CAUTION!**

Do not use alcohol, solvents or chemical products.



### **CAUTION!**

Do not clean the metal surfaces with chlorine-based detergent.

### 13.2 Descaling



If the water hardness in your area is high or moderate, we recommend that you use a water descaling product for washing machines.

Regularly examine the drum to check any limescale.

The regular detergents already contain water softening agents, but we recommend to run a cycle with empty drum and a descaling product occasionally.



Always follow the instructions that you find on the packaging of the product.


### 13.3 Maintenance wash

The repeated and prolonged use of low temperature programmes can cause detergent deposits, fluff residues, bacterial growth inside the drum and the tub. This could generate bad odours and mildew.

To eliminate these deposits and hygienize the inner part of the appliance, run a maintenance wash regularly (at least once a month):

1. Remove all laundry from the drum.
2. Run a cotton programme with the highest temperature with a small quantity of powder detergent.

### 13.4 Door seal

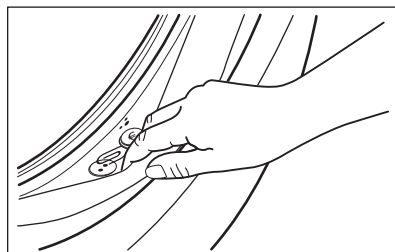

Regularly examine the seal and remove all objects from the inner part.

### 13.5 Cleaning the drum

Regularly examine the drum to prevent unwanted deposits.

Rust deposits in the drum may occur due to rusting foreign body in the washing or tap water containing iron.

Clean the drum with special products for stainless steel.



Always follow the instructions that you find on the packaging of the product.

Do not clean the drum with acidic descaling products, scouring products containing chlorine or iron or steel.

For a thorough clean:

1. Clean the drum with special products for stainless steel.




Always follow the instructions that you find on the packaging of the product.

2. Run a short cotton programme at high temperature with empty drum and with a small quantity of powder detergent or, if available, run the Čištění pračky programme.


### 13.6 Cleaning the detergent dispenser

To prevent possible deposits of dried detergent or clotted fabric softener and/or formation of mould in the detergent dispenser drawer, once in a while carry out the following cleaning procedure:


1. Open the drawer. Press the catch downwards as indicated in the picture and pull it out.

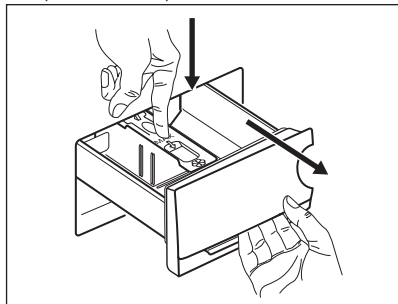


2. Remove the top part of the additive compartment to aid cleaning and flush it out under running warm water, to remove any traces of accumulated detergent. After cleaning, replace the top part in its position.

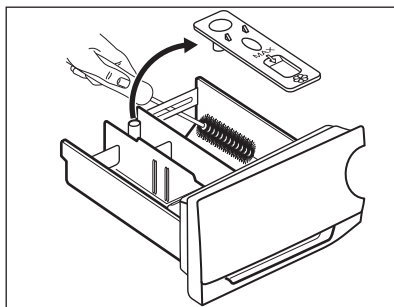

3. Make sure that all detergent residue is removed from the upper and lower part of the recess. Use a small brush to clean the recess.

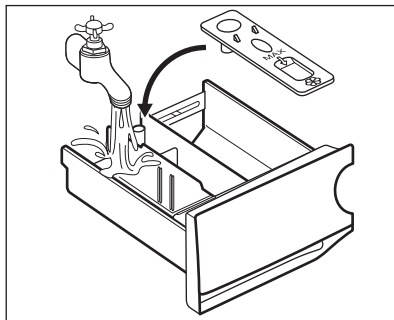

4. Insert the detergent drawer into the guide rails and close it. Run the rinsing programme without any clothes in the drum.

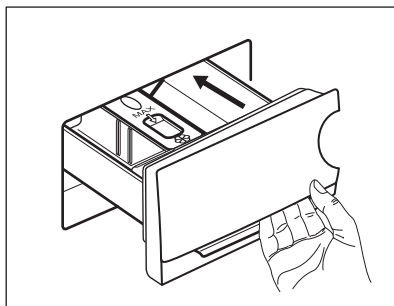

### 13.7 Cleaning the drain pump

Regularly check the drain pump filter and make sure that it is clean.

Clean the drain pump if:


- The appliance does not drain the water.
- The drum does not turn.
- The appliance makes an unusual noise because of the blockage of the drain pump.
- The display shows the alarm code **E20**

**WARNING!**


- Disconnect the mains plug from the mains socket.
- Do not remove the filter while the appliance operates.
- Do not clean the pump if the water in the appliance is hot. Wait until the water cools down .
- Repeat Step 3 several times by closing and opening the valve until the water stops flowing out.

Always keep a rag nearby to dry up any water spillages when removing the filter.


Proceed as follows to clean the pump:

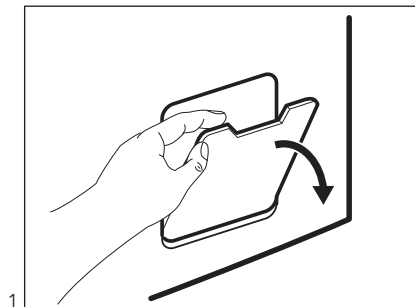


1.

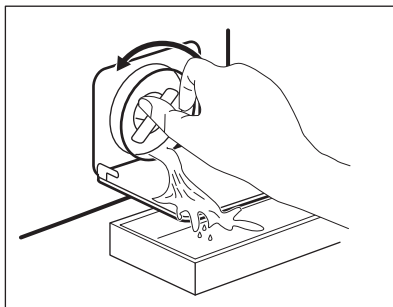


2.

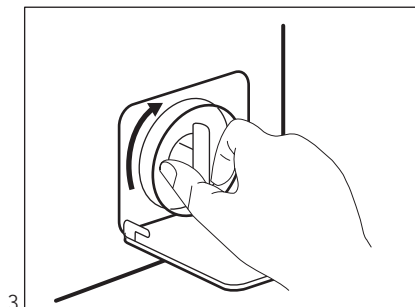


3.

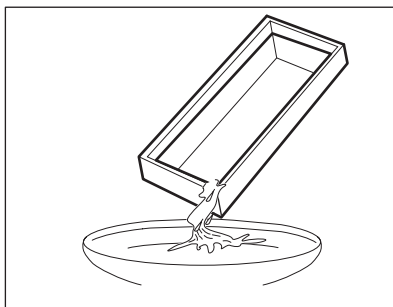


4.

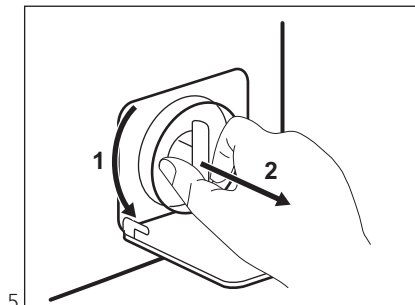


5.

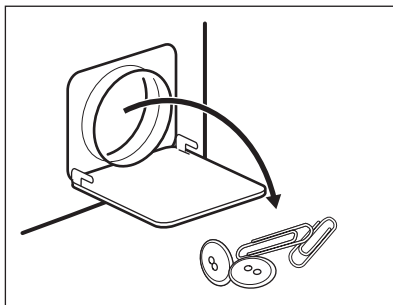


6.

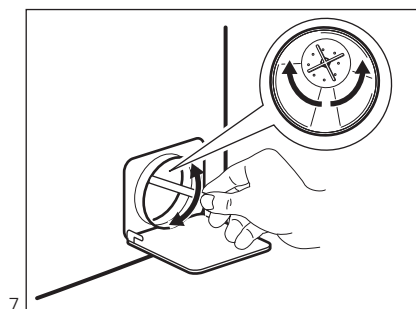


7.

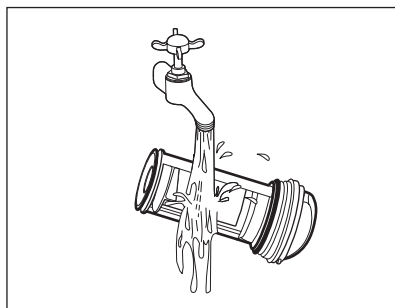

8.

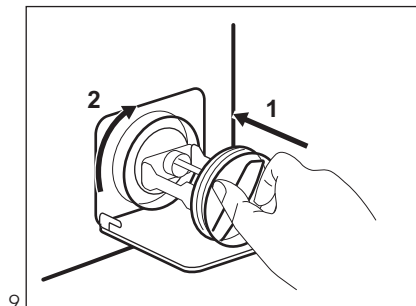

9.

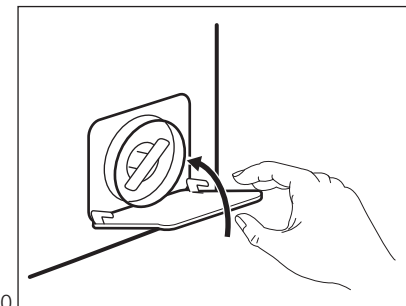

10.

**WARNING!**

Make sure that the impeller of the pump can rotate. If it does not rotate, contact the Authorised Service Centre. Make sure also that you tighten the filter correctly to prevent leakages.


When you drain the water with the emergency drain procedure, you must activate the drain system again:

1. Put 2 litres of water in the main wash compartment of the detergent dispenser.
2. Start the programme to drain the water.


### 13.8 Cleaning the inlet hose and the valve filter

It is recommended to clean both the filters of the inlet hose and valve occasionally to remove any deposit, collected over the time:


1. Remove the inlet hose from the tap and clean the filter.

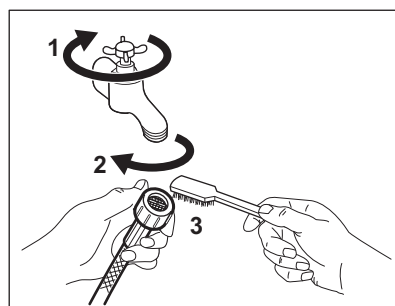


2. Remove the inlet hose from the appliance by loosening the ring nut.

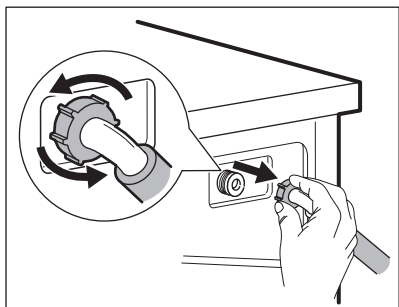

3. Clean the valve filter on the back of the appliance with a toothbrush.

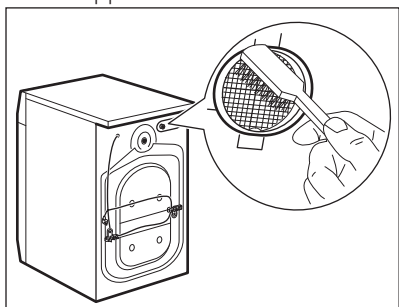

4. When you reconnect the hose to the back of the appliance, turn it left or right (not in vertical position) depending on the position of your water tap.

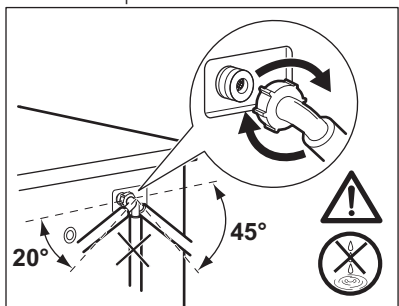

## 13.9 Emergency drain

If the appliance cannot drain the water, carry out the same procedure, described in 'Cleaning the drain filter' paragraph. If necessary, clean the pump.

When you drain the water with the emergency drain procedure, you must activate the drain system again:

1. Put 2 litres of water in the main wash compartment of the detergent dispenser.
2. Start the programme to drain the water.

## 13.10 Frost precautions

If the appliance is installed in an area where the temperature can reach the values around 0° C or drop below, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Put the two ends of the inlet hose in a container and let the water flow out of the hose.
4. Empty the drain pump. Refer to the emergency drain procedure.
5. When the drain pump is empty, install the inlet hose again.



### WARNING!

Make sure that the temperature is higher than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

## 14. TROUBLESHOOTING



### WARNING!

Refer to Safety chapters.

### 14.1 Introduction


The appliance does not start or it stops during operation.

First try to find a solution to the problem (refer to the table). If the problem persists, contact the Authorised Service Centre.

**In case of major problems, the acoustic signals operate, the display shows an alarm code and the Start/Pauza button may flash continuously:**

- **E10** - The appliance does not fill with water properly.  
Start the appliance again by pressing Start/Pauza button. After 5 seconds the door will be unlocked.
- **E20** - The appliance does not drain the water.
- **E40** - The appliance door is open or not closed correctly. Please check the door!
- **E40** - The mains supply is unstable.  
Wait until the mains supply is stable.
- **E91** - No communication between electronic elements of the appliance.  
Switch it off and switch on again.  
The programme was not finished properly or the appliance stopped too early. If the alarm code appears again, contact the Authorised Service Centre.

**i** If the appliance is overloaded, remove some items from the drum and/or keep pressed the door while touching the Start/Pauza button until the indicator  stops flashing (see the picture below).

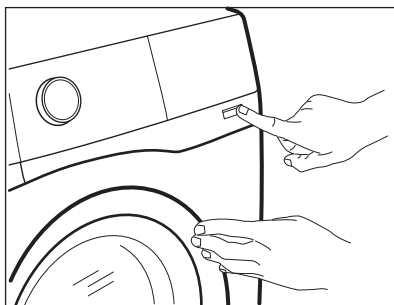

### **WARNING!**

Deactivate the appliance before carrying out any check.

## 14.2 Possible failures

| Problem                       | Possible solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The programme does not start. | <ul style="list-style-type: none"> <li>• Make sure that the mains plug is connected to the mains socket.</li> <li>• Make sure that the appliance door is closed.</li> <li>• Make sure that there is no damaged fuse in the fuse box.</li> <li>• Make sure that the Start/Pauza  has been touched.</li> <li>• If the delay start is set, cancel the setting or wait for the end of countdown.</li> <li>• Deactivate the Child Lock function if it is on.</li> <li>• Check the position of the knob on the selected programme.</li> </ul> |

| Problem                                                                       | Possible solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance does not fill with water properly.                              | <ul style="list-style-type: none"> <li>• Make sure that the water tap is open.</li> <li>• Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.</li> <li>• Make sure that the water tap is not clogged.</li> <li>• Make sure that the inlet hose has no kinks, damages or bends.</li> <li>• Make sure that the connection of the water inlet hose is correct.</li> <li>• Make sure that the filter of the inlet hose and the filter of the valve are not clogged. Refer to 'Care and cleaning'.</li> </ul> |
| The appliance fills with water and drains immediately                         | <ul style="list-style-type: none"> <li>• Make sure that the drain hose is in the correct position. The hose may be positioned too low. Refer to "Installation instruction".</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                         |
| The appliance does not drain the water.                                       | <ul style="list-style-type: none"> <li>• Make sure that the sink spigot is not clogged.</li> <li>• Make sure that the drain hose has no kinks or bends.</li> <li>• Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to "Care and cleaning".</li> <li>• Make sure that the connection of the drain hose is correct.</li> <li>• Set the drain programme if you set a programme without drain phase.</li> <li>• Set the drain programme if you set an option which ends with water in the tub.</li> </ul>                                    |
| The spin phase does not operate or the washing cycle lasts longer than usual. | <ul style="list-style-type: none"> <li>• Set the spin programme.</li> <li>• Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to "Care and cleaning".</li> <li>• Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems.</li> </ul>                                                                                                                                                                                                                                           |
| There is water on the floor.                                                  | <ul style="list-style-type: none"> <li>• Make sure that the couplings of the water hoses are tight and there is not water leakages.</li> <li>• Make sure that the water inlet hose and the drain hose have no damages.</li> <li>• Make sure you use the correct detergent and the correct quantity of it.</li> </ul>                                                                                                                                                                                                                                                           |
| You cannot open the appliance door.                                           | <ul style="list-style-type: none"> <li>• Make sure that a washing programme that ends with water in tub, has been selected.</li> <li>• Make sure that the washing programme is finished.</li> <li>• Set the drain or the spin programme if there is water in the drum.</li> <li>• Make sure that the appliance receives electrical power.</li> <li>• This problem may be caused by a failure of the appliance. Contact the Authorised Service Centre.</li> </ul>                                                                                                               |



| Problem                                                                             | Possible solution                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance makes an unusual noise and vibrates.                                  | <ul style="list-style-type: none"> <li>• Make sure the levelling of the appliance is correct. Refer to "Installation instruction".</li> <li>• Make sure that the packaging and/or the transit bolts are removed. Refer to "Installation instruction".</li> <li>• Add more laundry in the drum. The load may be too small.</li> </ul> |
| The programme duration increases or decreases during programme execution.           | <ul style="list-style-type: none"> <li>• The ProSense System is able to adjust the programme duration according to the type and the laundry load size. Refer to "The ProSense System load detection" in "Daily Use" chapter.</li> </ul>                                                                                              |
| The washing results are not satisfactory.                                           | <ul style="list-style-type: none"> <li>• Increase the detergent quantity or use a different detergent.</li> <li>• Use special products to remove the stubborn stains before you wash the laundry.</li> <li>• Make sure that you set the correct temperature.</li> <li>• Decrease the laundry load.</li> </ul>                        |
| Too much foam in the drum during the washing cycle.                                 | <ul style="list-style-type: none"> <li>• Reduce the quantity of detergent.</li> </ul>                                                                                                                                                                                                                                                |
| After the washing cycle, there are some detergent residues in the dispenser drawer. | <ul style="list-style-type: none"> <li>• Make sure that the detergent insert is in the correct position.</li> <li>• Make sure you have used the detergent dispenser according the indications given in this user manual.</li> </ul>                                                                                                  |

After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the Authorised Service Centre.

If the display shows other alarm codes, deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

## 15. CONSUMPTION VALUES



Stated values are obtained in laboratory conditions with relevant standards. Different causes can change the data: the quantity and type of laundry and ambient temperature. Water pressure, the supply voltage and the temperature of inlet water may also affect the washing programme duration.



Technical specifications may be changed without prior notice to improve the quality of product.



During the washing programme, the Prosense technology can vary the wash duration and the consumption values. For more details see 'The Prosense load detection' paragraph in 'Daily Use' chapter.

| Programmes                                                                                                          | Load (kg) | Energy consumption (kWh) | Water consumption (litre) | Approximate programme duration (minutes) | Remaining moisture (%) <sup>1)</sup> |
|---------------------------------------------------------------------------------------------------------------------|-----------|--------------------------|---------------------------|------------------------------------------|--------------------------------------|
| Bavlna 60°C                                                                                                         | 6         | 1.21                     | 69                        | 205                                      | 53                                   |
| Bavlna 40°C                                                                                                         | 6         | 0.84                     | 65                        | 170                                      | 53                                   |
| Syntetika 40°C                                                                                                      | 3         | 0.72                     | 61                        | 130                                      | 35                                   |
| Jemné prádlo 40°C                                                                                                   | 1         | 0.48                     | 43                        | 60                                       | 35                                   |
| Vlna/Hedvábí 30°C                                                                                                   | 1         | 0.19                     | 37                        | 70                                       | 30                                   |
| <b>Standard cotton programmes</b>  |           |                          |                           |                                          |                                      |
| Standard 60°C cotton               | 6         | 0.82                     | 46                        | 215                                      | 53                                   |
| Standard 60°C cotton               | 3         | 0.61                     | 40                        | 185                                      | 53                                   |
| Standard 40°C cotton               | 3         | 0.52                     | 40                        | 180                                      | 53                                   |

<sup>1)</sup> At the end of spin phase.

| Off Mode (W)                                                                                                                           | Left On Mode (W) |
|----------------------------------------------------------------------------------------------------------------------------------------|------------------|
| 0.48                                                                                                                                   | 0.48             |
| The information given in the chart above is compliant with the EU Commission regulation 1015/2010 implementing directive 2009/125/EC . |                  |

16. TECHNICAL DATA


|                                                                                                                                                                                |                                               |                                       |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|---------------------------------------|
| Dimension                                                                                                                                                                      | Width/ Height/ Depth/ Total depth             | 595 mm / 850 mm / 380 mm / 420 mm     |
| Electrical connection                                                                                                                                                          | Voltage<br>Overall power<br>Fuse<br>Frequency | 230 V<br>2000 W<br>10 A<br>50 Hz      |
| Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture |                                               | IPX4                                  |
| Water supply pressure                                                                                                                                                          | Minimum<br>Maximum                            | 0.5 bar (0.05 MPa)<br>8 bar (0.8 MPa) |
| Water supply <sup>1)</sup>                                                                                                                                                     |                                               | Cold water                            |
| Maximum Load                                                                                                                                                                   | Cotton                                        | 6 kg                                  |

|                         |                    |          |
|-------------------------|--------------------|----------|
| Energy Efficiency Class |                    | A+++     |
| Spin Speed              | Maximum spin speed | 1151 rpm |

1) Connect the water inlet hose to a water tap with a 3/4" thread.

## 17. QUICK GUIDE

### 17.1 Daily use

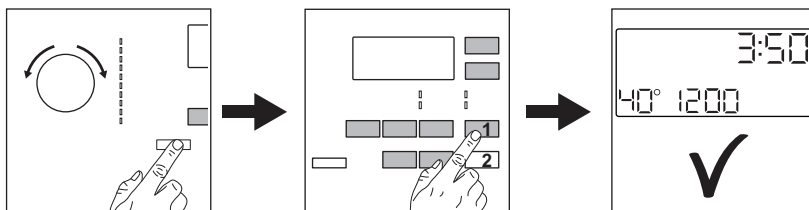

Connect the mains plug to the mains socket.

Open the water tap.

Load the laundry.

Pour the detergent and other treatment in the proper compartment of the detergent dispenser.


1. Push the Zap./Vyp. button to turn on the appliance. Turn the programme dial to set the desired programme.

2. Set the desired options by means of the corresponding touch buttons.

3. To start the programme, touch the **Start/Pauza** button.

At the end of the programme, remove the laundry.

### 17.2 Cleaning the drain pump filter

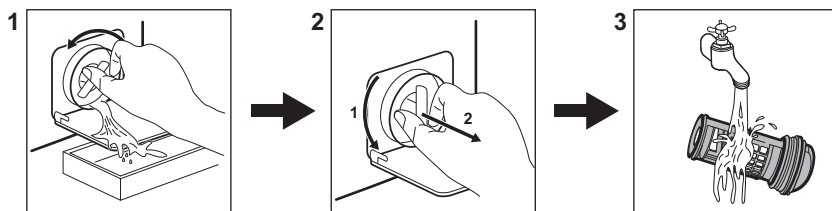

Clean the filter regularly and, especially, if the alarm code **E20** appears on the display.

17.3 Programmes

| Programmes                                                                                     | Load                                     | Product description                                                          |
|------------------------------------------------------------------------------------------------|------------------------------------------|------------------------------------------------------------------------------|
| Bavlna                                                                                         | 6 kg                                     | White cotton and coloured cotton.                                            |
| Syntetika                                                                                      | 3 kg                                     | Synthetic items or mixed fabric items.                                       |
| Jemné prádlo                                                                                   | 1 kg                                     | Delicate fabrics such as acrylics, viscose, polyester items.                 |
|  Vlna/Hedvábí | 1 kg                                     | Machine washable wool, hand washable wool and delicates.                     |
| Antialergický                                                                                  | 6 kg                                     | White cotton items. This programme helps to remove germs and bacteria.       |
| 20 min. - 3 kg                                                                                 | 1 kg                                     | Synthetic and mixed fabric. Lightly soiled items and garments to freshen up. |
| Snadné žehlení                                                                                 | 2 kg                                     | Synthetic items requiring a gentle wash.                                     |
| Pěřová bunda                                                                                   | 2 kg                                     | Single synthetic blanket, padded clothes, duvets, down jackets.              |
| Outdoor       | 2 kg <sup>1)</sup><br>1 kg <sup>2)</sup> | Modern outdoor sporting garments.                                            |
| Denim                                                                                          | 2 kg                                     | Denim clothing and jersey items.                                             |

1) Washing programme.

2) Washing programme and waterproofing phase.

18. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION 1369/2017

| Product Information Sheet                                                                                                                                                                                                                                   |                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| Trade Mark                                                                                                                                                                                                                                                  | AEG                    |
| Model                                                                                                                                                                                                                                                       | L6SE26WC, PNC914341103 |
| Rated capacity in kg                                                                                                                                                                                                                                        | 6                      |
| Energy efficiency class                                                                                                                                                                                                                                     | A+++                   |
| Energy consumption in kWh per year, based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used. | 153,0                  |
| Energy consumption of the standard 60°C cotton programme at full load in kWh                                                                                                                                                                                | 0.82                   |

|                                                                                                                                                                                                                                                                                                                                           |      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| Energy consumption of the standard 60°C cotton programme at partial load in kWh                                                                                                                                                                                                                                                           | 0.61 |
| Energy consumption of the standard 40°C cotton programme at partial load kWh                                                                                                                                                                                                                                                              | 0.52 |
| Power consumption of the off-mode in W                                                                                                                                                                                                                                                                                                    | 0,48 |
| Power consumption in left-on mode in W                                                                                                                                                                                                                                                                                                    | 0,48 |
| Water consumption in litres per year, based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load. Actual water consumption will depend on how the appliance is used.                                                                                                                          | 9999 |
| Spin-drying efficiency class on a scale from G (least efficient) to A (most efficient)                                                                                                                                                                                                                                                    | B    |
| Maximum spin speed in rpm                                                                                                                                                                                                                                                                                                                 | 1151 |
| Remaining moisture content in %                                                                                                                                                                                                                                                                                                           | 53   |
| The 'standard 60 °C cotton programme' and the 'standard 40 °C cotton programme' are the standard washing programmes to which the information in the label and the fiche relates, these programmes are suitable to clean normally soiled cotton laundry and they are the most efficient in terms of combined energy and water consumption. | -    |
| Programme time of the standard 60°C cotton programme at full load in minutes                                                                                                                                                                                                                                                              | 215  |
| Programme time of the standard 60°C cotton programme at partial load in minutes                                                                                                                                                                                                                                                           | 185  |
| Programme time of the "standard 40°C cotton programme at partial load in minutes                                                                                                                                                                                                                                                          | 180  |
| Duration of the left on mode in minutes                                                                                                                                                                                                                                                                                                   | 5    |
| Airborne acoustical noise emission in db(A) washing                                                                                                                                                                                                                                                                                       | 58   |
| Airborne acoustical noise emission in db(A) spinning                                                                                                                                                                                                                                                                                      | 77   |
| Built in appliance Y/N                                                                                                                                                                                                                                                                                                                    | No   |

The information given in the chart above is compliant with the EU Commission regulation 1015/2010 implementing directive 2009/125/EC .

## 19. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol .  
Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and

electronic appliances. Do not dispose of appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.





[www.aeg.com/shop](http://www.aeg.com/shop)



155290000-A-262019



**AEG**