



EN Welcome, Get started! ES Bienvenido, ¡comencemos! IT Benvenuto, iniziamo! NL Welkom, aan de slag! PT Bem-vindo, vamos começar! RO Bine ai venit, începem! RU Добро пожаловать, приступим! SK Vitajte, začnime! SL Dobrodošli, začnimo! SV Välkommen, Nu sätter vi igång! TR Hoş geldiniz, haydi başlayalım! UA Вітаємо, розпочинаємо! ZH 你好，开始吧！

Registration and Benefits: Read this important information leaflet carefully before you use the appliance and save it for future reference. Do not immerse the appliance or the mains cord in water or any other liquid.

Digital manual: This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product. 2023 © Versuni Holding B.V. 642001005503 (26/04/2024)

English

Introduction

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

- Read this important information leaflet carefully before you use the appliance and save it for future reference.

Danger

- Do not immerse the appliance or the mains cord in water or any other liquid.

Warning

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- Keep the mains cord away from hot surfaces.
- Never connect this appliance to an external timer switch in order to avoid a hazardous situation.
- Do not let the appliance operate unattended.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The accessible surfaces may become hot during use.

Caution

- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotel, motels, bed and breakfasts and other residential environments.
- If you wash the grill plates in the dishwasher, there's a chance that oxidation may happen at the back of the plate, which could result in black powder or substance remaining on the rear side of the plate.
- Only connect the appliance to an earthed wall socket.
- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- The temperature of accessible surfaces may be high when the appliance operates.
- Let the appliance cool down completely before you clean the appliance or put it away.
- Never touch the plates with sharp or abrasive items, as this damages the non-stick surface.
- Always switch off and unplug the appliance after use.
- In order to get the best result from your contact grill, always clean the appliance after every use. When you take the grills out heating elements will be opened, you can clean this parts with a piece of cloth. Be careful not to drop any water on these pads.

Electromagnetic fields (EMF)

- This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Ordering accessories

- To buy accessories or spare parts, visit www.philips.com/support or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

 
Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.


The appliance is plugged into an outlet.

The appliance is heating up.


1

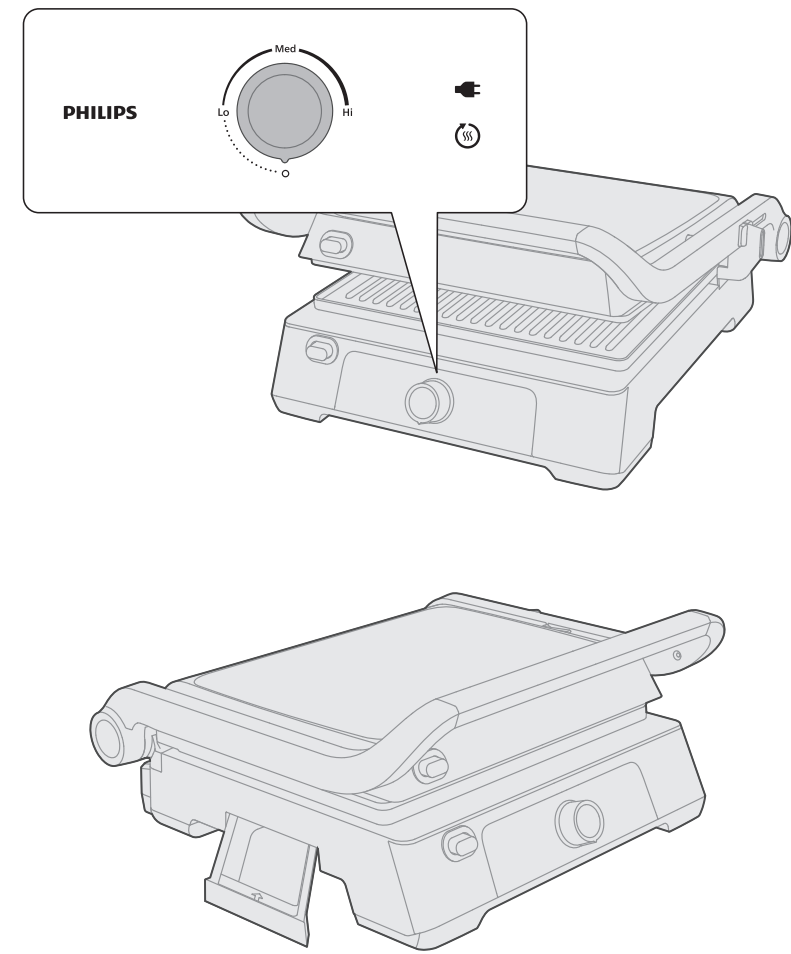


3

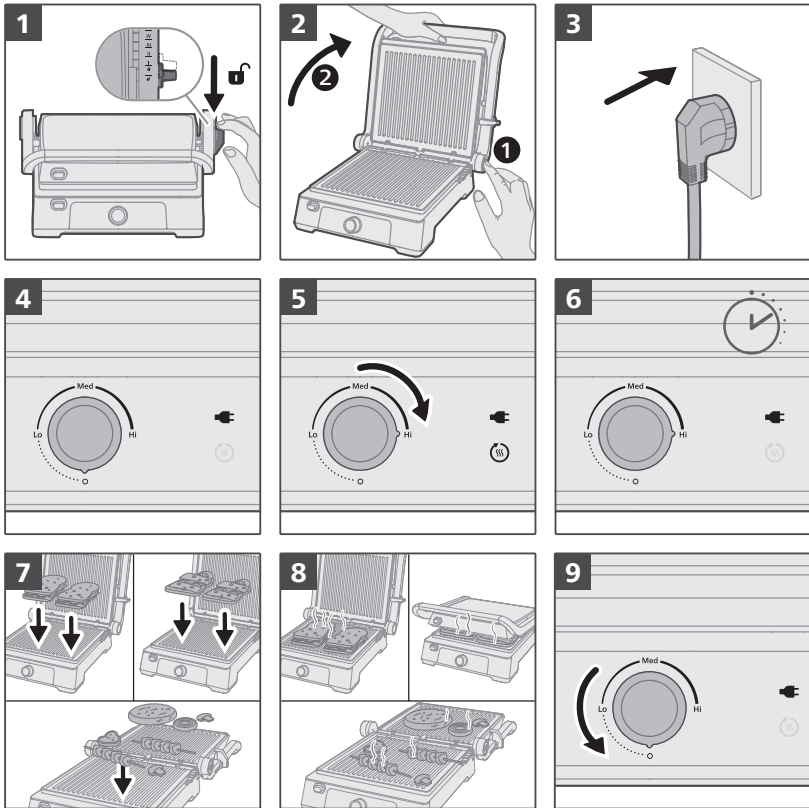 


2

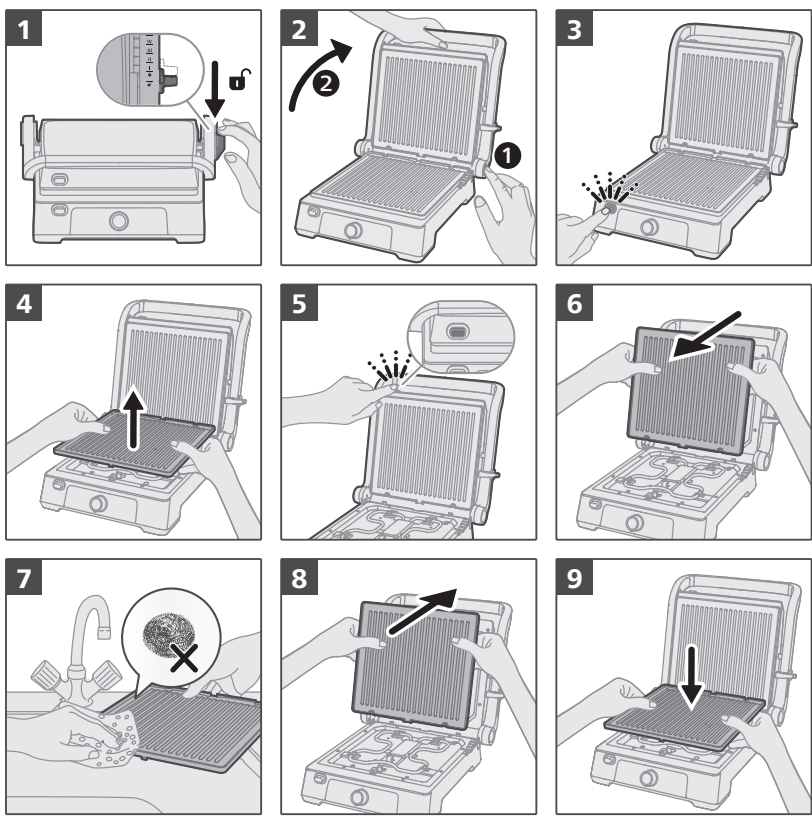 

4

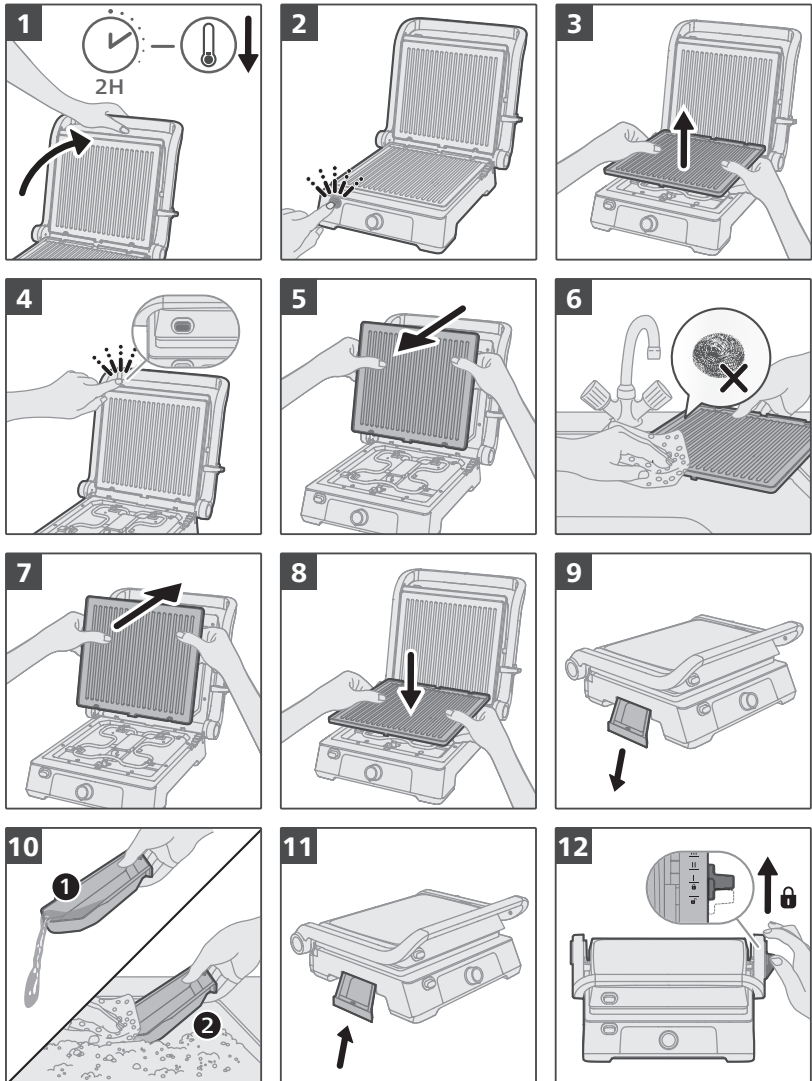 

4

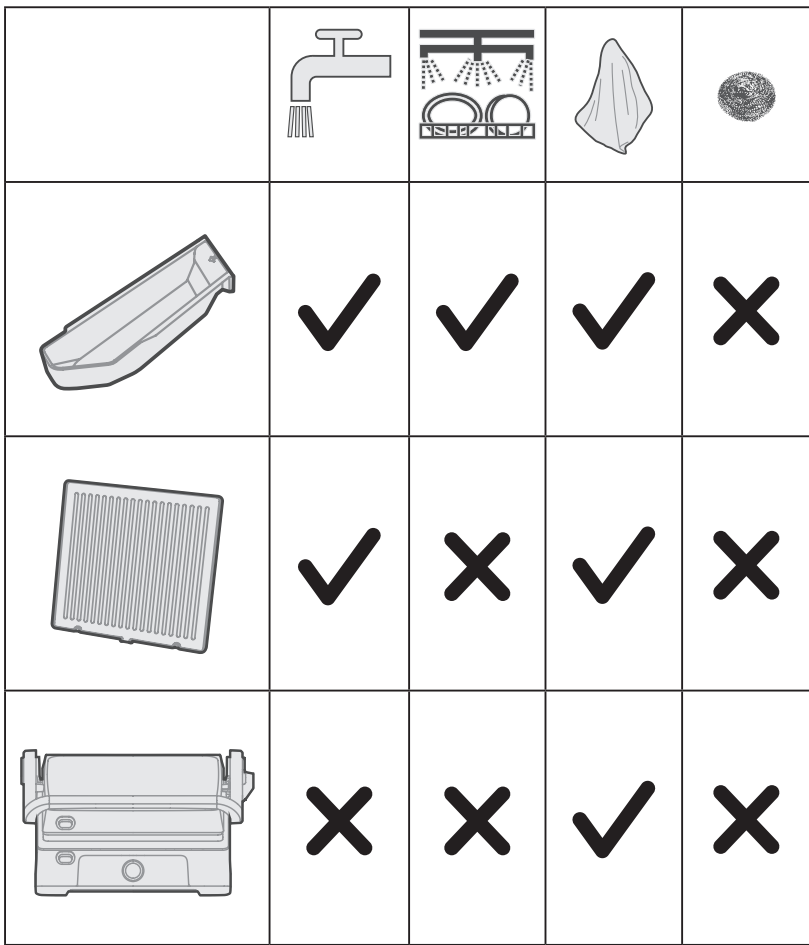 

5



		°C	Min.	
		Hi	6-9	
		Hi	3-4	
		Hi	4-6	
		Hi	8-10	
		Hi	5-8	
		Hi	10-12	
		Hi	6-8	
		Hi	4-6	
		Hi	8-10	
		Hi	18-20	
		Hi	7-9	
		Hi	25-30	
		Med	5-6	
		Med	6-7	
		Med	6-10	
		Med	20-25	
		Med	6-10	
		Med	20-25	
		Hi	3-5	
		Hi	8-12	
		Lo	6-10	
		Hi	6-8	

