



Safety Instructions

Read this manual carefully before use, and retain it for future reference.

This product is for floor cleaning in a home environment only. Do not use it outdoors, on non-floor surfaces, or in a commercial or industrial setting.

Usage Restrictions

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance contains batteries that are only replaceable by skilled persons.
- If the cord set is damaged, it must be replaced by a special cord set available from the manufacturer or its service agent.
- If the charger or battery becomes damaged, it must be replaced with a genuine component purchased from the manufacturer or after-sales service department.
- A hazard may occur if the appliance runs over the supply cord.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use the robot vacuum to clean any burning substances.
- Do not place children, pets, or any item on top of the robot vacuum while it is stationary or moving.
- Do not use the robot vacuum in an area suspended above ground level, such as a loft, open balcony, or on top of furniture, unless a protective barrier is present.
- Do not use the robot vacuum at an ambient temperature above 40°C or below 0°C or on a floor with liquids or sticky substances.
- Pick up any cables from the floor before using the robot vacuum to prevent it from dragging them while cleaning.
- Pick up any fragile or loose items from the floor, such as vases or plastic bags, to prevent the robot vacuum from being obstructed or bumping into them and causing damage.
- Do not use the mopping mode on carpets. Set virtual walls or restricted areas to exclude carpeted areas for mopping tasks.
- Do not allow the robot vacuum to pick up hard or sharp objects such as building materials, glass, or nails.
- Turn off and unplug the power supply before cleaning and maintaining the robot vacuum and omni station.
- Do not place the robot vacuum upside down. Laser radar housing should never touch the ground.
- Do not pick up the robot vacuum by its laser radar cover.
- Make sure the robot vacuum is turned off when being transported and kept in its original packaging if possible.
- Do not wipe with a wet cloth or rinse the robot vacuum and omni station with any liquid. After cleaning washable parts, dry them sufficiently before installing them for use.
- When the omni station is cleaning the mop pads, do not drag the robot vacuum out of the omni station to avoid causing any damage.

- Only use this product as directed in the user manual. Users are responsible for any loss or damage arising from improper use of this product.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- When a voice message "Network connected successfully" is heard, the device has a successful connection with the network and has stored the Wi-Fi SSID and password. The information will be used for network-related services, and the personal data processing should be referred to the Privacy Policy.
- For detailed e-manual, please go to www.mi.com/global/support/user-guide

Batteries and Charging

- Do not use any third-party batteries, cord sets, or omni stations. The robot vacuum can only be used with the model OV42-JZGL omni station.
- This appliance contains batteries that are only replaceable by skilled persons.
- Do not dismantle, repair, or modify the batteries or omni station on your own.
- Do not use a wet cloth or wet hands to wipe or clean the omni station's charging contacts.
- Do not place the omni station near a heat source, such as a radiator.
- Do not improperly dispose of old batteries. Used batteries should be discarded at a professional recycling facility.
- If the robot vacuum will not be used for an extended period, fully charge it, then turn it off and store in a cool, dry place. Recharge the robot vacuum at least once every 3 months to avoid over-discharging the battery.
- Do not expose the appliance or battery to excessive temperatures.
- Do not charge non-rechargeable batteries.
- No action needed from users to shift the power frequency between 50 Hz and 60 Hz, and the product can adapt itself for both 50 Hz and 60 Hz.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
- Do not damage the battery when removing it to avoid short circuits or liquid leakage. If the battery leaks, keep the fluid from touching your skin or clothes, and wipe it away immediately with a dry cloth. Then send the battery to an appropriate recycling facility or the designated after-sales service team to properly dispose of it.

Laser Safety Information

The laser sensor in this product meets the IEC 60825-1:2014 and EN 60825-1:2014/A11:2021 Standard for Class 1 laser products. Please avoid direct eye contact with it during use.

CLASS 1 LASER PRODUCT

CONSUMER LASER PRODUCT

EN 50689:2021

Environmental Notice

- The built-in lithium-ion batteries of this robot vacuum contain chemicals that may pollute the environment.

- Before disposing of this product, ask a professional to remove the batteries and then discard them at an appropriate recycling facility.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.

Steps to remove the batteries

The information is applicable only for disposing of this product and is not part of the regular operating instructions.

1. Keep the robot vacuum away from the omni station and make it operate until its battery level is too low to continue cleaning.
2. Turn off the robot vacuum.
3. Remove the bottom shell of the robot vacuum.
4. Press down on the clips and pull out the batteries' connectors to take out the batteries.

CAUTIONS:

- Make sure the battery is flat and the robot vacuum is far away from the omni station before removing the battery.
- Remove the entire battery pack together, and make sure not to damage the outer casing of the battery pack to prevent short-circuiting or leakage of harmful substances.
- If you come into physical contact with any substance that may leak out of the batteries, rinse the contact area with plenty of water and seek medical attention immediately.




For indoor use only.



Before use, read the instructions.

Product Overview

Pre-installed on the Robot Vacuum

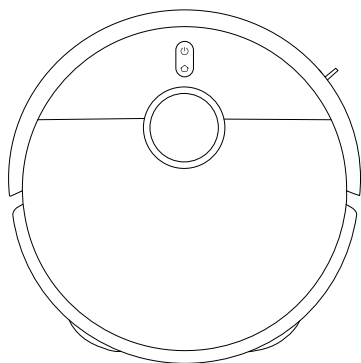

Robot Vacuum




Dust Compartment



Filter
(pre-installed on the dust
compartment)



Brush



Brush Cover



Mop Pad Holder × 2
(with pre-installed mop pad × 2)

Other Accessories



Side Brush



Cord Set



Image Guide




User Manual



Warranty Notice



Quick Start Guide

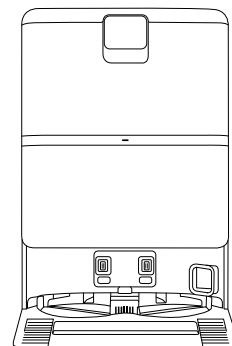


Omni Station
(with pre-installed clean water tank, dirty water
tank, disposable bag, and dirty water filter)

Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Product Overview


Robot Vacuum

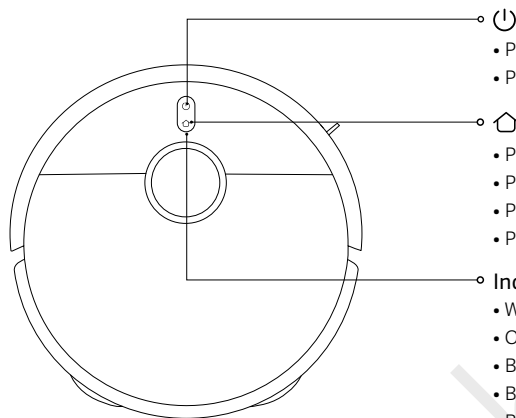

- Press and hold for 3 seconds to turn on or off
- Press to start or pause cleaning
- Press to pause while running
- Press to start docking when it is paused
- Press to stop docking when it returns to the omni station
- Press and hold for 3 seconds to enable or disable the child lock

Indicator

- White: Working normally
- Orange: Network disconnected
- Breathing white: Charging (medium/high battery level)
- Breathing orange: Charging (low battery level)
- Blinking white: Docking/Updating firmware/Restoring factory settings
- Blinking orange: Robot vacuum error

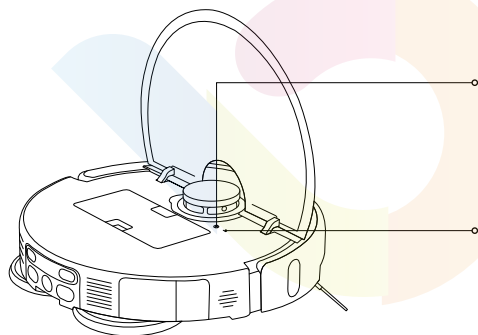

Reset Button




- Press and hold the reset button for 3 seconds with a pin-shaped object to restore the robot vacuum to factory settings

Wi-Fi Indicator


- Orange: Network disconnected
- Blue: Network connected
- Blinking orange: Awaiting network connection/Wi-Fi reset successfully
- Blinking blue: Connecting to network/Updating firmware

Product Overview

Robot Vacuum

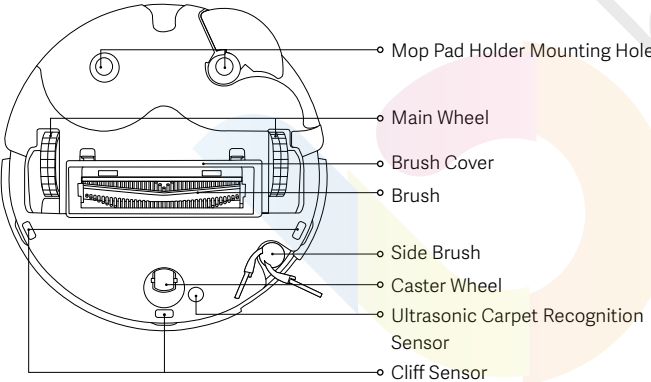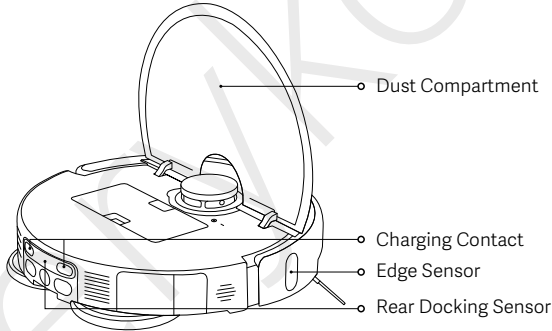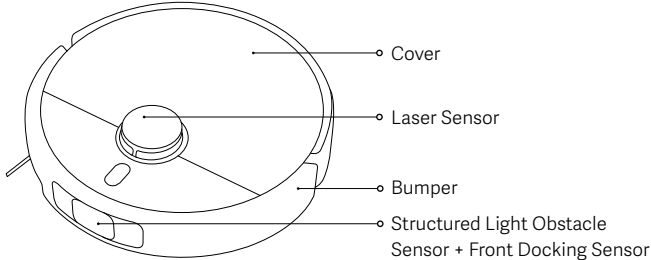


Dust Compartment




Note: All cleaning modes require installation of the dust compartment. Otherwise, the robot vacuum cannot start.

Mop Pad Assembly

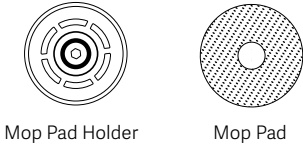

Product Overview


Omni Station

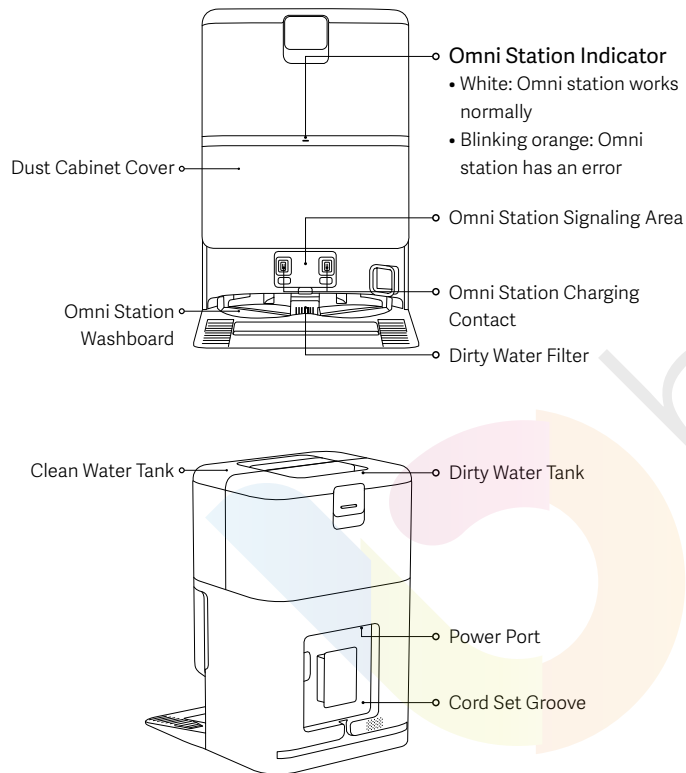

Before Use


Removing and Installing

- Remove protective strips on both sides of the robot vacuum.
- Install the side brush as illustrated. They are properly installed when a "click" is heard.

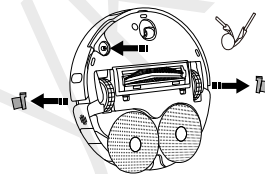

Placing the Omni Station

- Place the omni station against a wall on a flat, hard-surfaced floor, such as a wooden or tiled floor. Ensure it is in an area with a good Wi-Fi signal near an electrical outlet.
- Ensure a space with a length, height, and width greater than 1.25 m, 1 m, and 0.5 m, respectively.

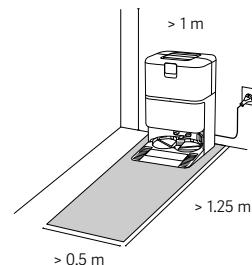


Notes:

- Do not place the omni station in an area with direct sunlight or where other objects could block the signaling area, as this could impair the robot vacuum's ability to return to the omni station.
- Do not place any items around the omni station.
- Install the clean water tank and dirty water tank in place.

Before Use

Connecting Power to Omni Station and Charging the Robot Vacuum

- Insert the cord set into the power port and connect it to a power supply.
- Place the robot vacuum onto the omni station with charging contacts fully aligned. The robot vacuum will then beep.

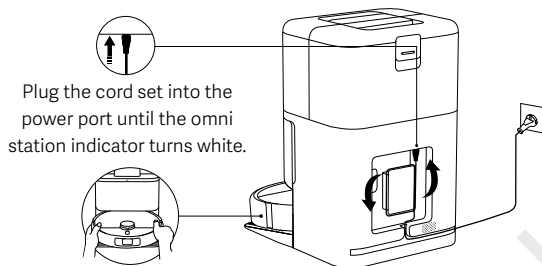

Notes:

- Arrange excess cord set in the cord set groove to prevent the omni station from displacement or loss of power supply due to cord set dragging.
- To ensure the battery's optimal performance, fully charge the battery for the first time before use.
- If the robot vacuum is unable to turn on due to low battery, place it directly onto the omni station to recharge.
- The robot vacuum will turn on automatically after connecting to the omni station, and cannot be turned off while charging.
- Indicators on both the robot vacuum and the omni station will turn off simultaneously 10 minutes after the robot vacuum is fully charged.
- When using the robot vacuum for the first time, follow app prompts to quickly create a map. It is recommended to follow the robot vacuum throughout the whole process to assist in cleaning up items that may affect the work of the robot vacuum.
- Make sure the robot vacuum starts from the omni station so as to create an accurate map.
- If the robot vacuum may get stuck or scratch the surface of the furniture in some areas, set restricted areas in the app to prevent the robot vacuum from entering those areas.

How to Use

Connecting with the Xiaomi Home App

This product works with the Xiaomi Home app. Use the Xiaomi Home app to control your device, and to interact with other smart home devices.

- Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search for "Xiaomi Home" in the app store to download and install it.
- Open the Xiaomi Home app, tap "+" on the upper right, and then follow the instructions to add your device.



F834536A

Notes:

- Only 2.4 GHz Wi-Fi networks are supported.
- The version of the app might have been updated, please follow the instructions based on the current app version.
- When the robot vacuum connects with the Xiaomi Home app successfully, it connects with the network successfully. You can have a reset of Wi-Fi to disconnect it from the network.

Issue	Solution
The robot vacuum cannot connect to Wi-Fi.	• Check whether the Wi-Fi password is correct. • The robot vacuum does not support the 5 GHz network frequency band, please connect it to a 2.4 GHz network. • There is something wrong with the Wi-Fi connection. Reset the Wi-Fi and download the latest version of the Xiaomi Home app, then try reconnecting. • Ensure the robot vacuum is in an area with good Wi-Fi coverage, then reset its Wi-Fi and reconnect it to the network.

How to Use


Resetting Wi-Fi

- While the robot vacuum is turned on, press and hold the buttons  and  for 7 seconds until a voice message is heard. The Wi-Fi is successfully reset when the indicator blinks orange.
- Reset the Wi-Fi connection when the robot vacuum needs to be disconnected from the network or the network needs to be changed.

Restoring Factory Settings

Use a pin-shaped object to press and hold the reset button for 3 seconds until a voice message is heard. The robot vacuum will be restored to factory settings.


Note: In case of any issue, try restarting the robot vacuum first. If the issue persists after the restart, restore the vacuum to factory settings.

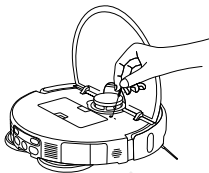

Installing Accessories for Desired Mode

Vacuuming Mode (installation of dust compartment is required):


Open the cover of the robot vacuum and securely install the dust compartment.

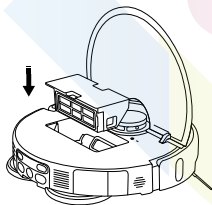

Note: Clean the dust compartment and filter regularly to avoid reducing vacuuming performance.



Vacuuming & Mopping Mode (installation of dust compartment, mop pad assembly, clean water tank, and dirty water tank is required):

1. Install the mop pad as illustrated until hearing a click.

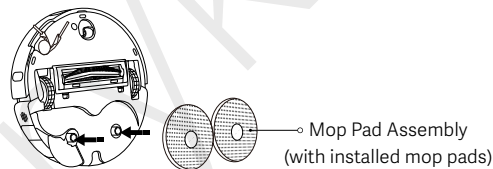

2. Fill the clean water tank with clean water up to the maximum water level mark. Do not add any cleaning agent or disinfectant to the water tank.

CAUTION: Adding cleaning agents or disinfectants may affect product functions and damage the machine.

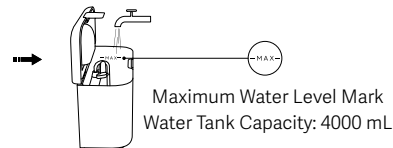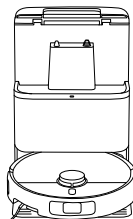

Notes:

- Do not add hot water into the clean water tank or the dirty water tank as this may cause their deformation.
- The functions of robot vacuums are tested before leaving the factory, so there may be some water residues in the robot vacuum. This is normal.


How to Use

Starting the Robot Vacuum

Press the button  to start vacuuming and mopping.

Notes:

- Please set virtual walls or restricted areas to exclude carpeted areas for mopping tasks.
- If the floor is overly wet, clean the excessive water first before using the vacuuming or mopping function.

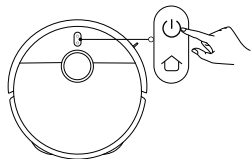

Turning On/Off

- Press and hold the button  for 3 seconds to turn on the robot vacuum, and the indicator turn on.
- When the robot vacuum is paused and not charged, press and hold the button  for 3 seconds to turn it off.

Note: If the robot vacuum is being charged, it will automatically be turned on and cannot be turned off.

Pause

When the robot vacuum is running, press any button on the robot vacuum to pause, and then press the button  to resume cleaning.

Note: Do not lift or move the robot vacuum while it is paused. Otherwise, it may have positioning errors that could prevent the robot vacuum from returning to the omni station or cause the loss of map data.

Sleep Mode

- The robot vacuum will enter sleep mode after being paused for 10 minutes.
- In sleep mode, the robot vacuum indicator will turn off. Press any button to wake the vacuum from sleep mode.

Notes:

- The robot vacuum will not enter sleep mode when docked on the omni station.
- The robot vacuum will automatically turn off after being in sleep mode for 6 hours.

Child Lock

Press and hold the button  for 3 seconds during charging or pause to enable or disable the child lock function.

Cleaning the Mop Pads

- During vacuuming and mopping, the robot vacuum will resume its task after it automatically returns to the omni station to clean the mop pads.
- The robot vacuum will automatically return to the omni station to clean the mop pads after vacuuming and mopping. Once cleaning is done, the robot vacuum will dry the mop pads and start charging.
- When the robot vacuum enters standby on the omni station, select Cleaning the mop pad on the Xiaomi Home app to start cleaning mop pads. Once the cleaning is completed, the omni station will automatically start drying mop pads and charging the robot vacuum.

Note: Mop pad cleaning will not be performed if any of the following conditions occur: loss of power to the omni station, robot vacuum off the omni station, empty clean water tank, full dirty water tank, or water tank not properly installed.

Dust Emptying

The omni station will start auto dust emptying once the robot vacuum returns to charge after completing a cleaning task.

Notes:

- The omni station will not perform auto dust emptying if this feature is disabled in the app.
- The omni station will perform dust emptying at the frequency set in the app.


Resuming Cleanup

The robot vacuum will automatically return to the omni station to charge when it runs low on battery during a cleaning task, and then it will resume the cleanup where it left off once sufficiently charged.

Care & Maintenance


Cleaning Dirty Water Filter

- Remove the dirty water filter and thoroughly clean any hair and dirt off it.
- Reinstall the dirty water water filter properly after cleaning.

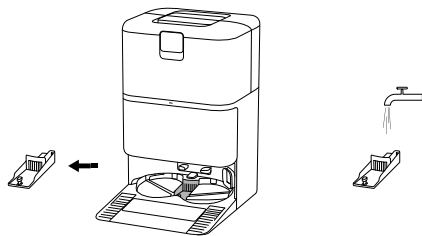

Cleaning Omni Station Washboard

Enable the omni station's assisted cleaning in the app and follow instructions to complete cleaning.

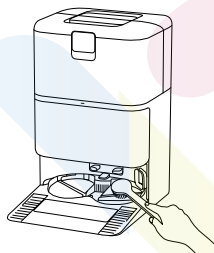


Notes:

- Make sure the robot vacuum is on the omni station.
- Do not tilt the omni station during daily use or cleaning. If water collects in the omni station washboard, wipe it dry with a cloth.

Cleaning Dirty Water Tank


Remove and clean the dirty water tank promptly when mop pads have been cleaned to prevent odor and mildew.

Note: Both the floater in the clean water tank and the float ball in the dirty water tank are movable. Avoid using excessive force to prevent damage.

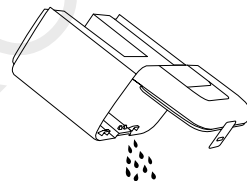

Replacing Disposable Bag

1. Open the dust cabinet cover, remove the used disposable bag, and install a new disposable bag securely.
2. Reinstall the dust cabinet cover into place. Press firmly until you hear a click sound to ensure it is properly installed.

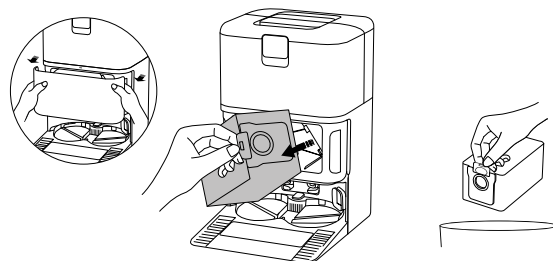


Note: Pulling the handle upwards will seal the disposable bag to effectively prevent dust or dirt from getting out.


Care & Maintenance

Cleaning the Dust Compartment and Filter

1. Open the cover of the robot vacuum, and press the dust compartment release button to remove the dust compartment from the robot vacuum.

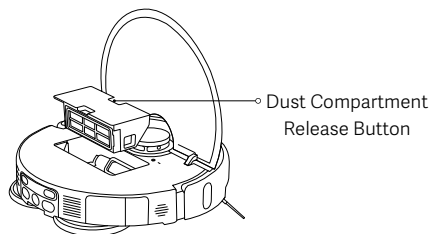

2. Take out the filter as illustrated, remove the dirt from the dust compartment, and clean the filter. Then, wash the dust compartment and the filter with fresh water if needed, and dry them before reinstalling.

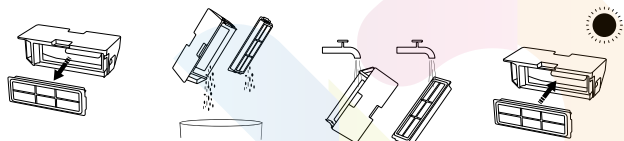

Notes:

- Do not attempt to clean the filter with a brush or fingers.
- Frequent rinse is not recommended, otherwise the filter may be damaged.
- Only use clean water to clean the dust compartment and filter. Do not use detergent.

Cleaning the Mop Pad


Remove the mop pad from its holder, then wash and dry it.



Cleaning the Side Brush and Caster Wheel

1. Turn the robot vacuum upside down and pull out the side brush and caster wheel upwards.
2. Clean any hair or debris that may have gotten stuck on the side brush and caster wheel.
3. Reinstall the side brush and caster wheel.


Note: Reinstall the side brush and caster wheel promptly after cleaning.

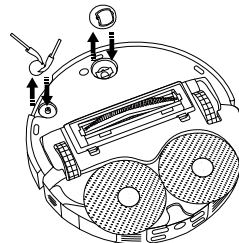

Care & Maintenance


Cleaning the Brush

1. Turn the robot vacuum upside down and pinch two clips to remove the brush cover.
2. Remove the brush and pull out the removable end cap to clean the dirt.
3. Reinstall the removable end cap, the brush, and the brush cover in order after cleaning. The brush cover is installed in place when a "click" is heard.

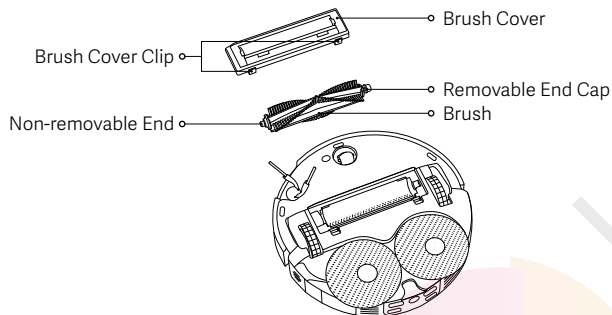


Cleaning Comb

1. Pry up the comb from the clips with a tool and remove it as illustrated.
2. Clean the comb and reinstall it after ensuring it is dry.

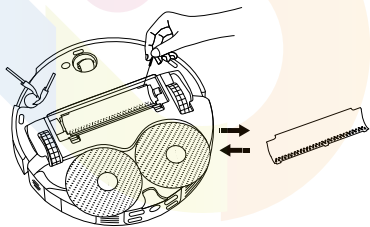


Cleaning Sensors and Charging Contacts

Please clean the sensors and charging contacts periodically using a soft, dry cloth.

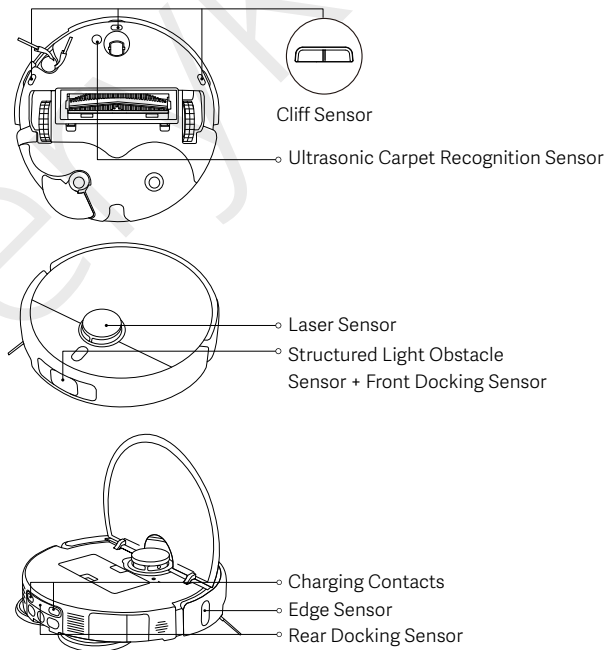

Note: Do not use detergents, aerosol cleaning agents, or other chemical products to clean sensors and charging contacts.

Care & Maintenance

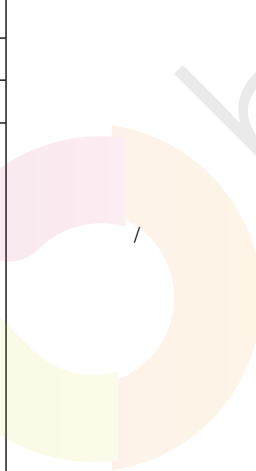Parts	Maintenance Frequency	Replacement Frequency
Side Brush	Every 2 weeks	3–6 months
Brush		6-12 months
Filter		3–6 months
Brush Cover	/	3–6 months (or upon wear)
Mop Pad	/	1–3 months (or upon wear)
Disposable Bag	/	2.5 months (or when it is full)
Dust Compartment	Clean as required	
Clean Water Tank	Every 2 weeks	
Dirty Water Tank	After each use	
Dirty Water Filter	Every month	
Omni Station Washboard		
Caster Wheel		
Laser Sensor		
Edge Sensor		
Structured Light Obstacle Sensor + Front Docking Sensor		
Cliff Sensor		
Rear Docking Sensor		

Parts	Maintenance Frequency	Replacement Frequency
Ultrasonic Carpet Recognition Sensor	Every month	/
Charging Contacts		
Robot Vacuum		
Omni Station		
Omni Station Charging Contact		
Omni Station Signaling Area		

Notes:

- Replacement frequency is for reference only. If a part is damaged, it should be replaced promptly to ensure efficient cleaning.
- To move or ship the robot vacuum, empty the clean water tank and dirty water tank to avoid damage in transit.

Common Issues

Issue	Possible Cause and Solution
The robot vacuum could not turn on, nor start cleaning.	The battery level is low. Recharge the robot vacuum, and then try again.
The robot vacuum could not return to the omni station to charge.	There are too many obstructions around the omni station. Place the omni station in a more open area. The robot vacuum is too far away from the omni station. Move it closer to the omni station and try again.
The robot vacuum has an abnormal behavior.	Turn the robot vacuum off and then restart it.
The robot vacuum makes strange noises while cleaning.	A foreign object might have been caught in the brush, side brush, or one of the main wheels. Turn off the robot vacuum and remove any debris if any.
The robot vacuum no longer cleans efficiently or leaves dust behind.	The dust compartment is full. Please clean it. The disposable bag is full, please replace it. The filter is blocked, please clean the filter. A foreign object has been caught in the brush. Please clean the brush.
The robot vacuum is offline or cannot connect to the Xiaomi Home app.	The Wi-Fi signal is weak. Make sure the robot vacuum and omni station are in an area with a strong Wi-Fi signal. There is something wrong with the Wi-Fi connection. Reset the Wi-Fi of the robot vacuum and download the latest version of the Xiaomi Home app, and then try reconnecting.

Issue	Possible Cause and Solution
The robot vacuum does not resume cleanup.	Make sure the robot vacuum is not set to DND mode, which will prevent the robot vacuum from resuming cleanup. Cleanup will not resume if the robot vacuum is returned to the omni station to charge with the button on it or in the Xiaomi Home app, or by hand.
The robot vacuum does not charge.	Make sure there is enough open space around the omni station and its charging contacts are free of dust and other debris. The ambient temperature is too low or too high. Make sure the temperature is at 0°C to 40°C and then charge again.
The robot vacuum does not perform scheduled cleanups.	Make sure the robot vacuum is connected to the network; otherwise, it cannot synchronize time and perform the scheduled cleanups. Make sure the robot vacuum is not set to DND mode. The DND mode will prevent the robot vacuum from performing scheduled cleanups.
The omni station does not perform the mop pad cleaning.	There is insufficient water in the clean water tank. Fill it up with clean water and then try again. The dirty water tank is full. Pour out the dirty water, clean the dirty water tank, and then try again. The water level of the washboard is too high. Please remove the water in time. Make sure the dirty water filter is installed in place.

Troubleshooting

Error Prompt	Possible Cause and Solution
Please clean any foreign objects from the laser sensor area.	Clear any foreign objects that may block or obstruct the laser sensor, or move the robot vacuum to a new place and restart it.
Wipe the cliff sensor clean and move the robot vacuum to a new location to start.	Part of the robot vacuum may be off the ground, re-position the robot vacuum and restart it. Or, the cliff sensors may be dirty, wipe them clean.
Bumper error. Please check whether the bumper can rebound properly.	The collision buffer is stuck. Gently tap on it to remove foreign objects; if there are no foreign objects, move the robot vacuum to a new place and turn it on.
Please move the robot vacuum to a level surface to start.	The robot vacuum has detected that it is at an angle on activation. Restart it after placing the device on a flat surface.
Please remove any obstacles around the robot vacuum.	The robot vacuum may be caught or stuck. Clear away any obstructions around it.
Dust compartment uninstalled.	Install the dust compartment and the filter, and make sure they are secured in place.
Clean water tank uninstalled or water insufficiency detected.	Reinstall the clean water tank and refill it with fresh water. Make sure it is installed in place.
Dirty water tank uninstalled or filled.	Empty and clean the dirty water tank, and then reinstall it. Make sure it is installed in place.

Error Prompt	Possible Cause and Solution
Disposable bag not installed.	Reinstall the disposable bag, and make sure it is installed in place.
The water level of the omni station washboard is too high. Please remove the water in time.	Check and clean the omni station washboard.
Couldn't return to charge. Manually place the robot vacuum onto the omni station.	The robot vacuum could not sense the position of the omni station. Put the robot vacuum back onto the omni station to charge.
Battery level is too low, please charge.	The robot vacuum cannot be turned on normally due to low battery. Put the robot vacuum back onto the omni station to charge.

Specifications

Robot Vacuum

Name	Robotic Vacuum Cleaner
Model	OV42GL
Item Dimensions	355 × 353.5 × 93 mm
Net Weight	3.9 kg
Net Weight (with accessories)	10.6 kg
Rated Power	55 W
Rated Voltage	14.4 V $\overline{\sim}$
Charging Voltage	20 V $\overline{\sim}$
Charging Time	≤ 6 h
Lithium-ion Battery	4800 mAh (rated capacity) 5200 mAh (nominal capacity)
Operation Frequency	2400–2483.5 MHz
Maximum Output Power	< 20 dBm
Wireless Connectivity	Wi-Fi IEEE 802.11 b/g/n 2.4 GHz Bluetooth 5.0
Power Consumption	Standby mode: ≤ 0.5 W Networked standby mode: ≤ 2.0 W
Time to Enter the Condition	Standby mode: ≤ 20 min Networked standby mode: ≤ 20 min

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

Omni Station

Model	OV42-JZGL
Rated Input	220–240 V $\sim$ 50/60 Hz
Rated Output	20 V $\overline{\sim}$ 1 A
Power (charging + air-drying)	86 W
Power (cleaning)	15 W
Power (dust emptying)	440 W
Item Dimensions	320 × 411 × 495 mm
Power Consumption	Standby mode: ≤ 0.5 W
Time to Enter the Condition	Standby mode: ≤ 20 min

Regulatory Compliance Information

EU Declaration of Conformity



Hereby, Xiaomi Communications Co., Ltd. declares that the radio equipment type OV42GL is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.mi.com/global/service/support/declaration.html>

WEEE Disposal and Recycling Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

WARRANTY NOTICE

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE. INDEED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD. OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

1. LIMITED PRODUCT WARRANTY

XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period.

The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website <https://www.mi.com/global/support/warranty>.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above.

Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free.

Xiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

2. REMEDIES

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) repair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shipping costs.

3. HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service, you must deliver the Product, in its original packaging

WARRANTY NOTICE

or similar packaging providing an equal degree of Product protection, to the address specified by Xiaomi. Except to the extent prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

4. EXCLUSIONS AND LIMITATIONS

Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademarks, trade name or "Xiaomi" or "Mi" logo.

The Limited Warranty does not apply to any (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi.

It is your responsibility to backup any data, software, or other materials you may have stored or preserved on the product. It is likely that the data, software or other materials in the equipment will be lost or reformatted during the service process, Xiaomi is not responsible for such damage or loss.

No Xiaomi reseller, agent, or employee is authorized to make any modification, extension, or addition to this Limited Warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase. Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from

warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product. The present warranties do not apply in Hong Kong and Taiwan.

5. IMPLIED WARRANTIES

Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular purpose) will have a limited duration up to a maximum duration of this limited warranty. Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation will not be applied in these cases.

6. DAMAGE LIMITATION

Except to the extent prohibited by applicable law, Xiaomi shall not be liable for any damages caused by accidents, indirect, special or consequential damages, including but not limited to loss of profits, revenue or data, damages resulting from any breach of express or implied warranty or condition, or under any other legal theory, even if Xiaomi has been informed of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of special, indirect, or consequential damages, so the above limitation or exclusion may not apply to you.

7. XIAOMI CONTACTS

For customers, please visit the website:

<https://www.mi.com/global/support/warranty>

The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

For further information, please go to www.mi.com
Manufacturer: Xiaomi Communications Co., Ltd.
Address: #019, 9th Floor, Building 6, 33 Xi'erqi Middle Road, Haidian District,
Beijing, 100085, China

EU REP.

Xiaomi Technology Netherlands B.V
Prinses Beatrixlaan 582, 2595BM, The Hague, The Netherlands
contact@support.mi.com

Importer:
Beryko s.r.o.
Pod Vinicemi 931/2, 301 00 Plzeň
www.beryko.cz

